 


LCD Remote Keypad Manual

The LCD remote keypad is designed to use with LCD control panels. It may be installed at any convenient location indoor for easy to access of the control panel.

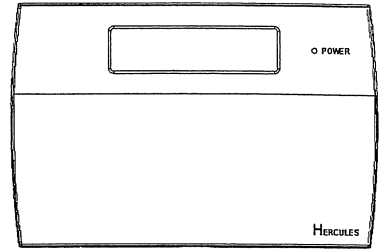

 
Features:

- Remote keypads with on board PA , Keys positioned up to 100 meters from control panel.
- Full arm, part arm, disarm, panic and learn function of a remote key can be received and operated by control panel.
- Real time clock display.
- 250 events memory are recorded with time stamp.
- Users may map zone number with the proper zone names. They can locate more easily where the triggered event is from the event display.
- User may view the zone mapping, triggered events etc with the menu driven buttons.

Please read the following steps in order to correctly install

1). Fixing:

Remove the outer cover and mount the backplate to the wall using screws or fixings that are appropriate for the construction of the building. Keyhole slots and slide mount are provided to assist with position


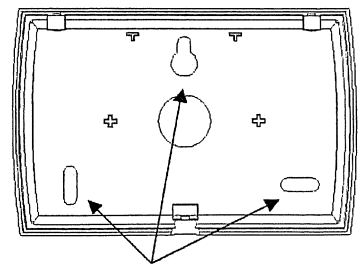


Mount to wall point

2). Select LCD remote keypad jumper

LCD backlight display

  
The LCD Backlight display is factory set to illuminate for 10 seconds each time a key is pressed, to enable the backlight to be illuminated permanently please remove the jumper link.

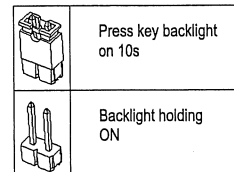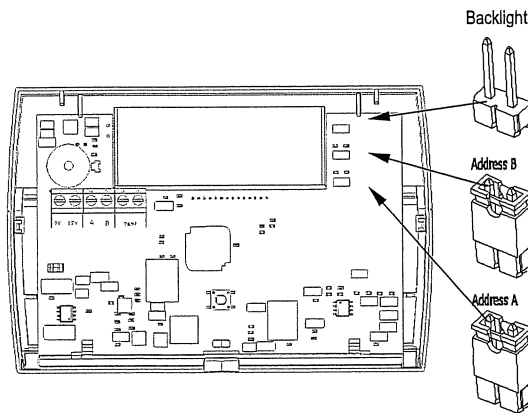

To set the address of the Remote Keypads, please apply the jumper links as follows,

	Keypad 1	Keypad 2	Keypad 3	Keypad 4
Address A	ON	OFF	ON	OFF
Address B	ON	ON	OFF	OFF

 3) Wiring diagram



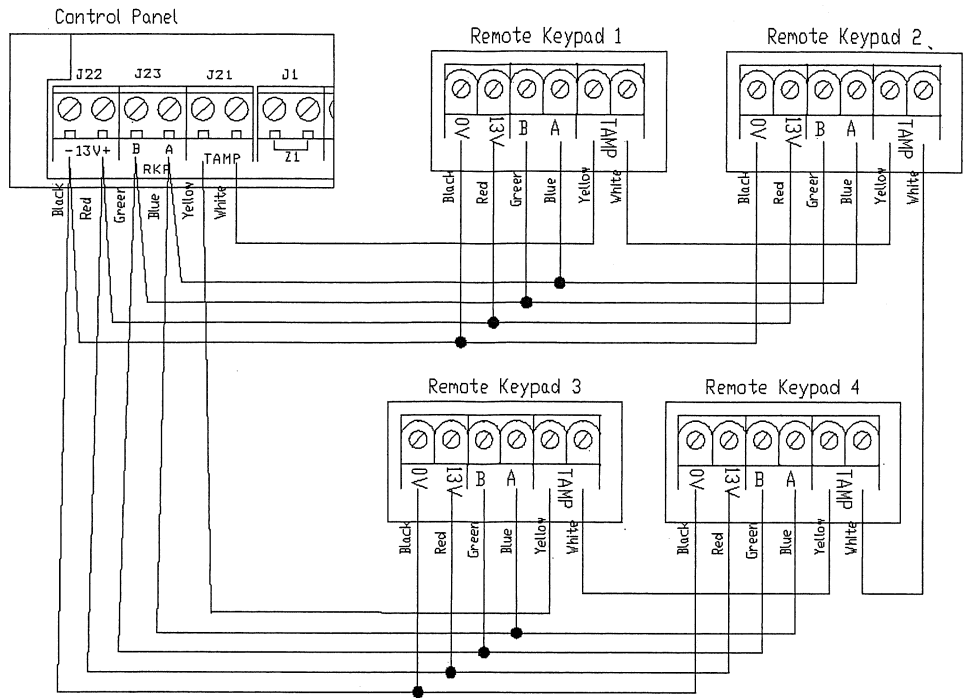


Specifications



Hold off Supply	13V dc
Housing	ABS
Current consumption	100mA
Standby Current	60mA
LCD	2 x 16 characters with backlight
LCD Backlight	Selectable (on/off)
Distance	Positioned up to 100 meters

1. Setting the System


 
 
- Enter 4-digit user code under DAY mode

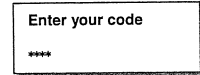

  - When you see the "To Set Select ", then press [Set] key to select Full Mode, or press [▲] [▼] to select Part 1 Mode or Part 2 Mode respectively. If not press any key, it will select the first mode in LCD displayed automatically.





   - If NO fault is found , the exit tone will sound and the exit time starts to count down.
- If it has faults in system, "Exit Faults " is shown and fault tone will be generated.
- Solve the faults, the fault tone stops and the exit tone will sound again until go into Set mode




2. Unsetting the System

  - The entry tone is generated after opening the main door for entry (the timed zone).
- Enter 4-digit user code before the entry time is expired




 
- The entry tone stops and the system is unset and return to DAY mode.



3. Resetting the System after alarm

Before resetting the system, unset the alarm first as the procedure stated at Section 2 After unset the system, it will stop system in alarm and the LCD keypad will display the latest zone alarm message.

 - The system requires user enter the valid code again for resetting the system.

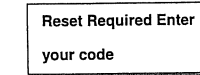

- The system returns to Day mode and is ready for Setting

