

Hercules - Off Board LCD Alarm Panel Engineering Manual


SAFETY

Before proceeding with the installation, please note the following safety warnings:

DO NOT connect the mains supply directly to the products, this will cause permanent damage to the products. Control panel is for indoor use only. Avoid mounting location which can expose this product to splashing or dripping liquid.

Always follow the manufacturer’s advice when using any tools power tools, ladder/steps,, using steps or ladders, and wear suitable protective equipment (e.g. safety goggles) when drilling holes, etc. The use of ear defenders are advisable when working in close proximity to the External Siren or the Control Panel’s Siren when the front panel cover is removed due to the high sound level produced by it. Before drilling holes in walls, check for hidden electricity cables and water pipes. The use of a cable/pipe locator is advisable if in doubt. Batteries (battery pack or batteries installed) should not be exposed to excessive heat. Danger of damage to the unit may occur if battery is incorrectly replaced. Replace only with the same or equivalent type. (Do not mix batteries type).

IMPORTANT – Please read this manual carefully, in full, before commencing Installation. You will find installation easier if you follow these steps in the sequence shown.

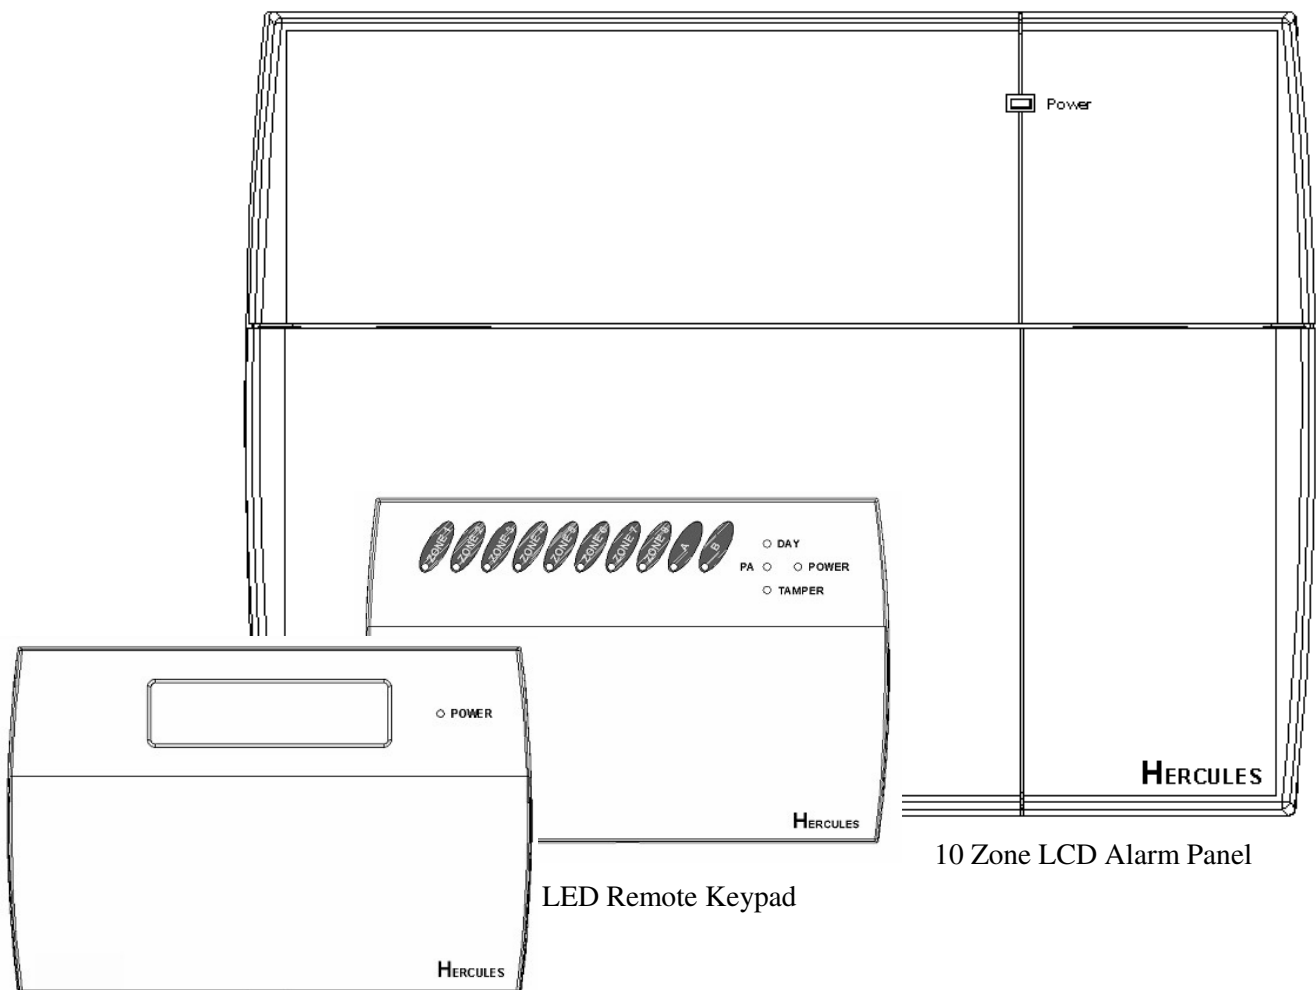

LCD Remote Keypad

Table of Contents

SECTION 1 - OVERVIEW OF SYSTEM	6
1.1 - Contents	6
1.2 - Tools Required	7
1.3 - System Feature	7
1.4 - Explanation of Terms	7
SECTION 2 – INSTALLING YOUR SYSTEM	8
2.1 - Fixing the Control Panel	8
2.2 - PCB	9
2.3 - Tamper network	9
2.4 - Remote Keypads	10
2.5 - Security Zones	11
2.6 - Fire Zone Circuit.....	11
2.7 - Tamper Zone Circuit.....	11
2.8 - PA Zone Circuit	12
2.9 - Extension speaker (Internal Sounder)	12
2.10 - External Siren Output (Bell box).....	13
2.10.1 - Vortex II wiring to control panel.....	14
2.10.2 - Solar bell wiring to control panel	15
2.10.3 - AD2510 wiring to control panel.....	16
2.11 - 13V Supply Output	16
2.12 - Set	16
SECTION 3 – FACTORY DEFAULT SETTING	17
SECTION 4 - MAINS CONNECTION	18

SECTION 5 - FIRST POWER UP	19
SECTION 6 – HOW TO SET UP THE SYSTEM	20
6.1 - LCD Keypad.....	20
6.1.1 - Setup Programs.....	20
6.1.1.1 - How to go into Full mode Setting.....	21
6.1.1.2 - How to go into Part 1 mode Setting.....	21
6.1.1.3 - How to go into Part 2 mode Setting.....	21
6.1.1.4 - How to set zone function	21
6.1.1.5 - How to set Exit mode function	22
6.1.1.6 - How to set Exit time function	23
6.1.1.7 - How to set Entry time function.....	24
6.1.2 - Setup Zones Type.....	24
6.1.2.1 - How to set Zone Name	24
6.1.2.2 - How to set Zone Type.....	26
6.1.3 - Setup Zones Attributes.....	27
6.1.4 - Setup Codes	28
6.1.4.1 - How to set up User Code	28
6.1.4.2 - How to change User Name	29
6.1.4.3 - How to change User Code	29
6.1.4.4 - How to delete User Code	30
6.1.5 - Setup system	31
6.1.5.1 - How to Setup System Flags	31
6.1.5.2 - How to Setup Bell Time.....	35
6.1.5.3 - How to Setup Rearm count	35
6.1.5.4 - How to Setup Bell delay time	36
6.1.5.6 - How to Setup Set Time	37
6.1.5.7 - How to Setup Set Date.....	37
6.1.5.8 - How to Setup Service Date.....	38
6.1.6 - Misc menu.....	38
6.1.6.1 - How to Show Help file	39
6.1.6.2 - How to Show Telephone.....	41
6.1.6.3 - How to modify alarm company information.....	41
6.1.6.4 - How to Restore to factory value using menu	42
6.1.7 - View Event Log	42
6.1.8 - Test System.....	43
6.1.8.1 - How to Test Outputs	43
6.1.8.2 - How to enter Walk Test.....	44
6.1.8.3 - How to enter View Walk Test.....	44
6.1.8.4 - How to enter View Panel Version.....	45
6.1.8.5 - How to Exit Engineer Program Menu.....	45
6.2 - LED Keypad.....	46
6.2.1 - Setup Programs.....	46

6.2.1.1 - How to go into Full mode Setting.....	46
6.2.1.2 - How to go into Part 1 mode Setting.....	47
6.2.1.3 - How to go into Part 2 mode Setting.....	47
6.2.1.4 - How to set zone function	47
6.2.1.5 - How to set Exit mode function	49
6.2.1.6 - How to set Exit time function	50
6.2.1.7 - How to set Entry time function.....	50
6.2.2 - Setup Zones Type.....	51
6.2.2.1 - How to set Zone Name	51
6.2.2.2 - How to set Zone Type.....	51
6.2.3 - Setup Zones Attrs.....	52
6.2.4 - Setup Codes	54
6.2.4.1 - How to set up User Code	54
6.2.4.2 - How to change User Name	54
6.2.4.3 - How to change User Code	55
6.2.4.4 - How to delete User Code	55
6.2.5 - Setup system	56
6.2.5.1 - How to Setup System Flags	56
6.2.5.2 - How to Setup Bell Time.....	59
6.2.5.3 - How to Setup Rearm count	59
6.2.5.4 - How to Setup Bell delay time	60
6.2.5.5 - How to Setup Set Time	60
6.2.5.6 - How to Setup Set Date.....	60
6.2.5.7 - How to Setup Service Date.....	60
6.2.6 - Misc menu.....	61
6.2.6.1- How to Restore to factory value using menu.....	61
6.2.7 - View Event Log	61
6.2.8 - Test System.....	62
6.2.8.1 - How to Test Outputs	63
6.2.8.2 - How to enter Walk Test.....	63
6.2.8.3 - How to enter View Walk Test.....	64
6.2.8.4 - How to enter View Panel Version.....	64
 SECTION 7 - USING SYSTEM.....	 65
7.1 - LCD Keypad.....	65
7.1.2 - Setting the System.....	65
7.1.2 - How to OMIT a zone(s)	66
7.1.3 - Unsetting the System.....	66
7.1.4 - How to UNSET from Alarm and RESET the system	67
7.1.5 - How to use Panic Alarm on keypad	67
 7.2 – LED Keypad	 68
7.2.1 - Setting the System.....	68
7.2.2 - How to OMIT a zone(s)	69

7.2.3 - Unsetting the System.....	69
7.2.4 - How to UNSET from Alarm and RESET the system	70
7.2.5 - How to use Panic Alarm on keypad	70
SECTION 8 - MAINTENANCE	71
SECTION 9 - TROUBLESHOOTING GUIDE.....	71
SECTION 10 - SPECIFICATIONS	73
APPENDIX 1 – EVENT LOG MESSAGES	74
APPENDIX 2 – ZONE - LOCATION TABLE	75
DISPOSAL AND RECYCLING	75
TECHNICAL SUPPORT	75


Section 1 - Overview of System

The 10 zone intruder alarm system is an indoor alarm system with special electronic design for short-circuit protection. It is simple to use, to be installed by special installation engineer , special tools or training is required.

1.1 - Contents


-10 Zone offboard LCD Alarm Panel.

This is the heart of the system. It receives signals from detectors. Accepts input from a user and activates warning devices such as siren and strobe lights.

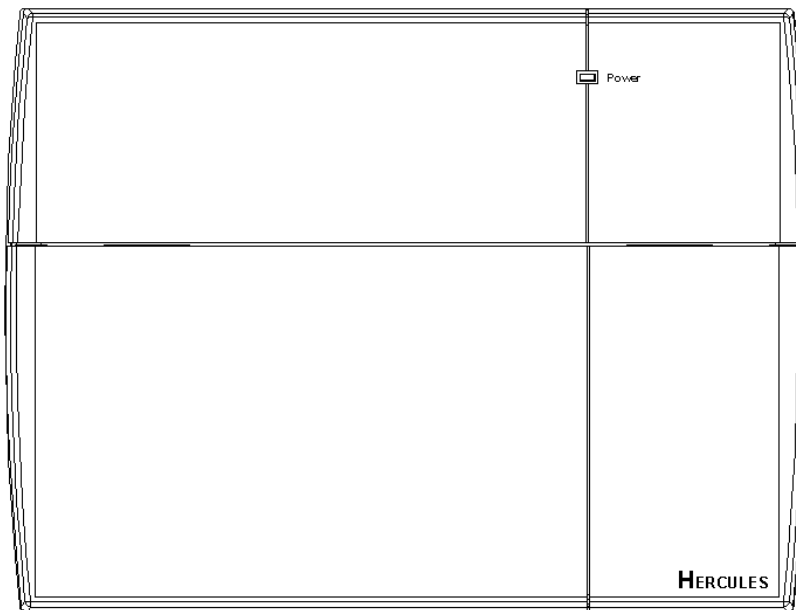


Option :

LCD Remote Keypad

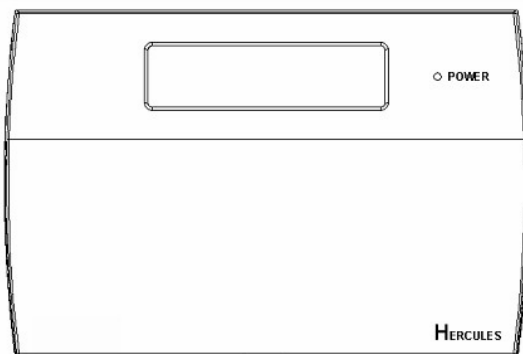

LED Remote Keypad

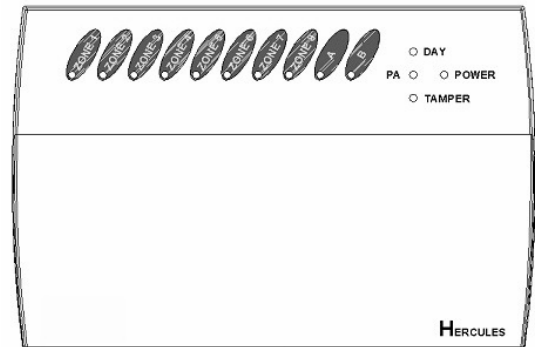

1.2 - Tools Required

- Large and small flat bladed screwdrivers
- Large and small cross-point screwdrivers
- Power drill
- Hammer
- 5mm, 8mm and 10mm masonry drill bits
- Sharp knife
- Wire cutters & wire stripper
- Ladder or other safe working platform

1.3 - System Feature

- 10 Zones programmable for security, PA, Fire, 24Hr Tamper.
- TAMPER input
- Output for External Siren and Strobe.
- 4 Access Level Codes, manager code, engineer code, user code (LED system has two, LCD system has ten), holiday code, all programmable.
- 1 Full set and 2 fully selectable part set programs.
- Chime on any security zone
- 250 events memory for LCD Keypad, 16 events memory for LED Keypad
- Programmable timers for exit, entry and bell cut off
- Walk Test mode
- Quick set system
- Single Key Set mode
- Name zone for LCD remote keypad
- Supports up to four remote keypads with on board PA , Keys positioned up to 100 meters from control panel.
- Keypads can be wired in a star or daisy chain configuration from control panel
- Non-volatile memory for protection of engineer program, manager and event log.
- Battery capacity of up to 2.1AH

1.4 - Explanation of Terms

Zone – A logical area that is monitored by one detector.

Disarm – It is the normal state of the system when the house is occupied. Enter your four-digit user PIN code would return to OFF state.

Full Alarm (ARM state) – The CU will sound full alarm (internal siren) when it receives alarm signals.

Part Arm (Home state) – Arming the system so that certain zones omitted (i.e. will not trigger an alarm).

Entry/Exit Zone – The CU recognize MC zone as entry and/or exit zone.

OK Beep – Rapid double tone; it indicates correct operation.

Error Beep – Long single tone; it indicates incorrect operation.

Section 2 – Installing your System


In choosing a suitable location you should bear in mind:

- The need to reach the keypad easily, within the 30 seconds, when entering and leaving the premises, ideally passing only one detector.
- The CU should not be visible from the exterior of the protected premises.
- Reception of radio signals can be affected by the presence of metal objects within a few feet of the CU. (E.g. mirrors, central heating radiators, garage doors and cars parked in garages on the opposite side of the wall. Avoid any location which is near (within 60cm) to these or any other large metal objects.


2.1 - Fixing the Control Panel

CAUTION: When positioning the control panel ensure that it is located in a dry place away from damp areas.

Step 1. Remove the front cover(s) from the base assembly.

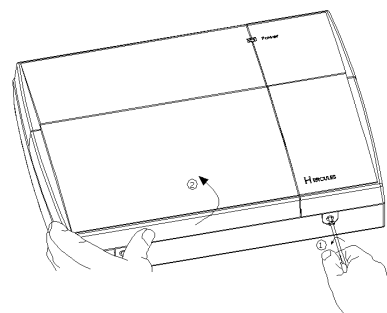


Step 2. Carefully remove the board by taking away screws at both edges

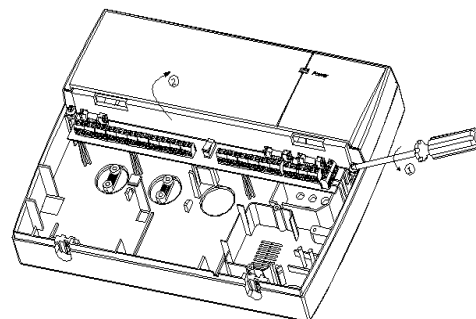

Step 3. Fit the panel to wall with suitable fixings. Ensure the wall surface is flat to prevent base distortion. There are cable entry holes provided in the rear of the base and around the outside edges through the thinned out plastic sections which may be cut away as required.

Step 4. The hole provided adjacent to the mains transformer is a dedicated mains cable entry point.

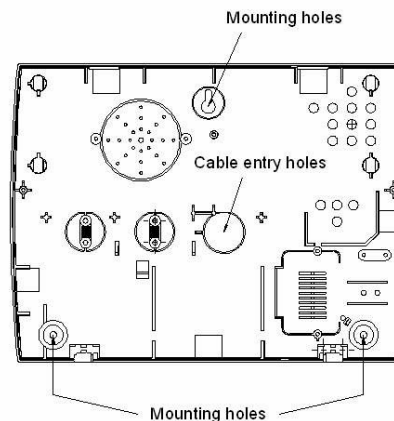


2.2 - PCB

There are three fuses mounted on the circuit board. All are 20mm anti-surge

- F1 1.6A – to protect the positive (+Ve) line of 12V battery
- F2 1A – to protect the RKP 13V supply
- F3 1A – to protect the Siren (Bell)&Strobe supply

As supplied, wire links are fitted across the Tamper terminal to represent a closed circuit.

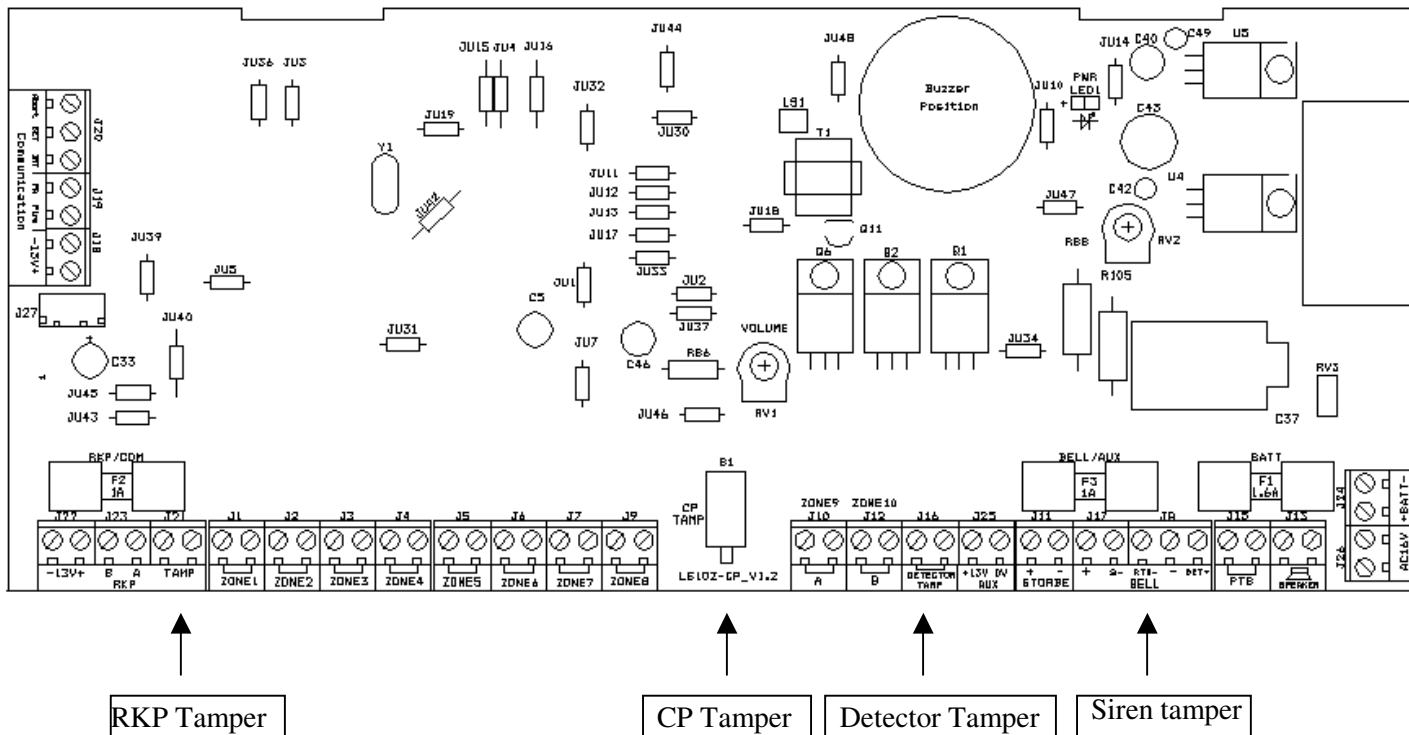

CAUTION: Always power-down the panel when wiring external circuits, to prevent damage to the panel electronics.

Systematically wire and test each circuit:

- Zone and Tamper circuit
- Finish by wiring any additional extension speaker sounders, external siren(bell)/strobe and the 13V supply.

2.3 - Tamper network

The Tamper circuit is used to protect all cables and detectors in the system from unauthorized access including the panel and RKP covers.

The zone and PA tampers should be series wired and connected to TAMP terminals. Terminals RTN-&- are for the external siren tamper. The TAMP terminals at the bottom left of the board are for the RKP tampers.

2.4 - Remote Keypads

CAUTION: When the Alarm Control Panel is being installed ensure there is at least one LCD /LED remote keypad wired to the panel before first power up.


A combination of up to four LCD/LED remote keypads can be connected to the panel.

LCD /LED remote keypad connects with LCD control panel


LCD backlight display

The LCD Backlight display is factory set to illuminate for 10 seconds each time a key is pressed, to enable the backlight to be illuminated permanently please remove the jumper link.

1). Select remote keypad jumper

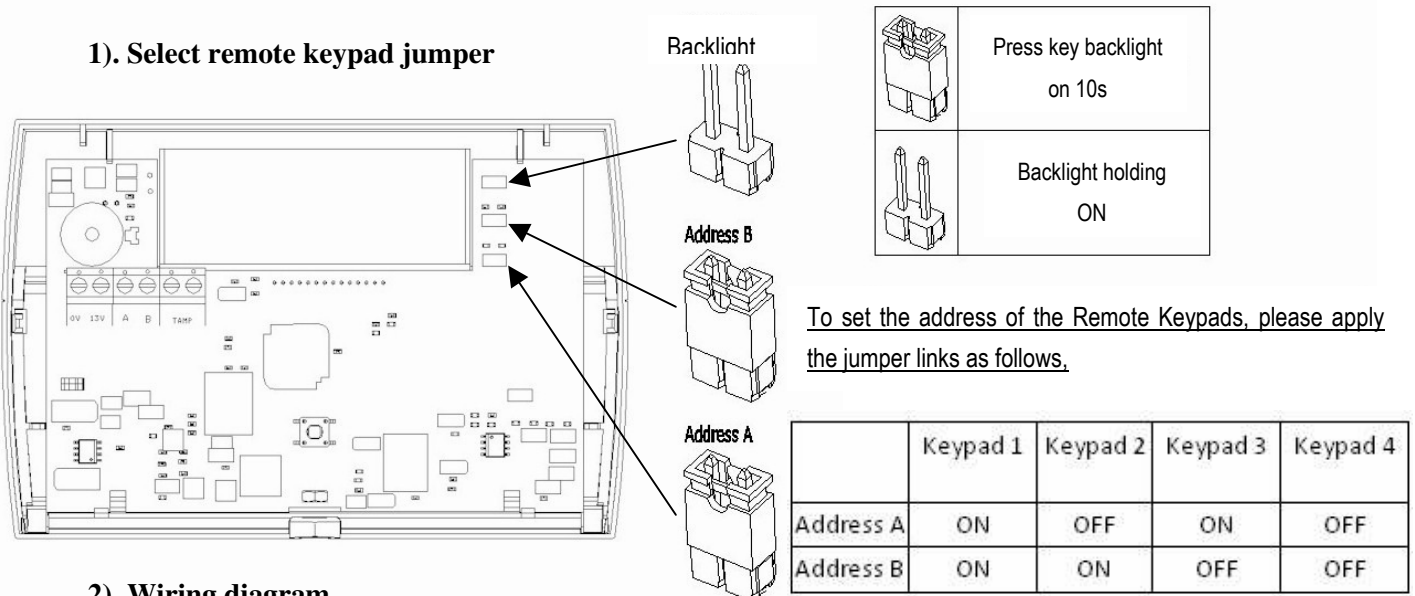

2). Wiring diagram

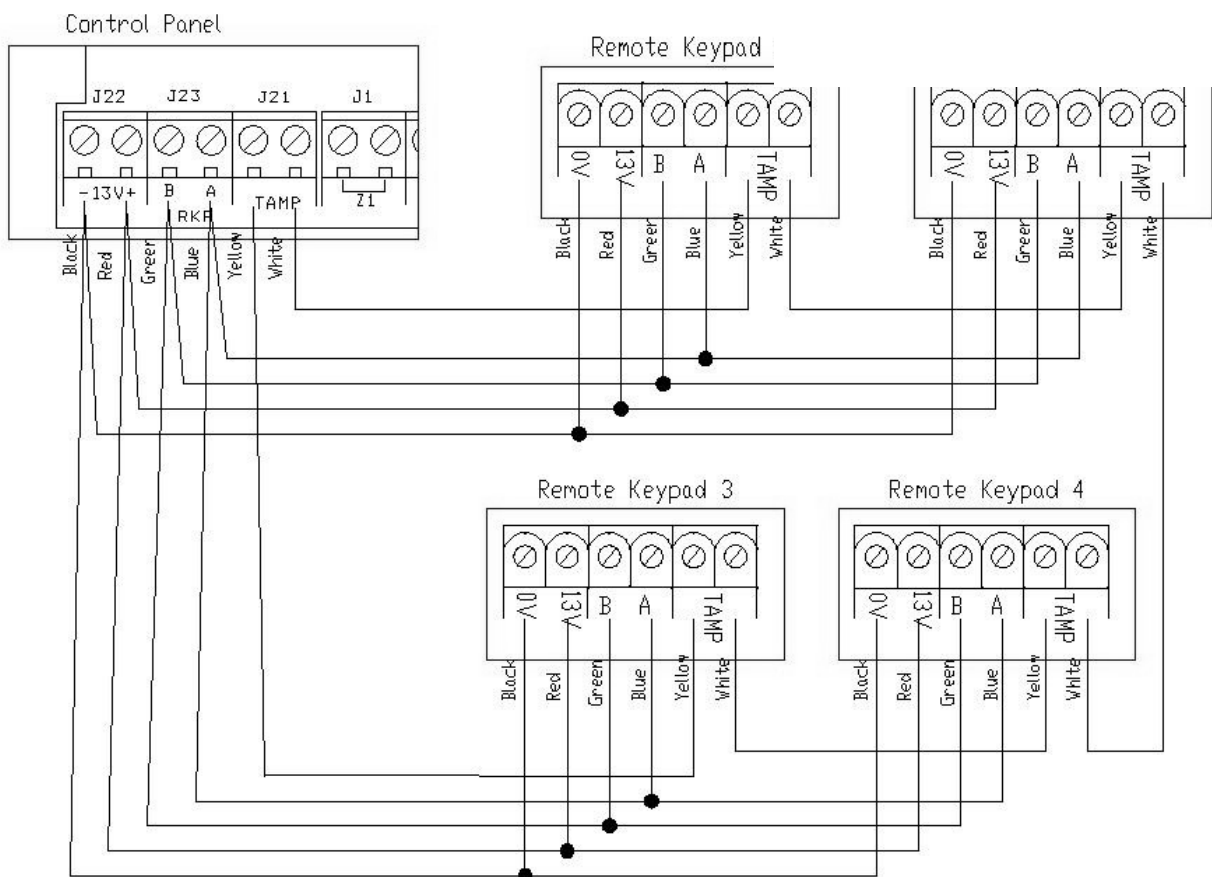


Fitting the Remote Keypad

- a. Separate the RKP base plate from the main assembly by slackening the retaining screw.
- b. Cut away the required thin wall sections around the edges of the base plate for cable entry.
- c. The base plate may be fitted directly to the wall using the screws and wall plugs supplied, if these are not appropriate for the wall the use suitable alternative fixings.
- d. Bring the cables into the base plate and wire to the terminal block on the base plate, see diagram on the previous page.
- e. Refit the RKP main assembly to the base plate by hooking it onto the top holding clips. Check that the wiring does not foul the tamper switch/spring or the PCB support pillar. Rescuer the screw in the bottom of the case.


2.5 - Security Zones

PIR and MS connect to control panel block diagram

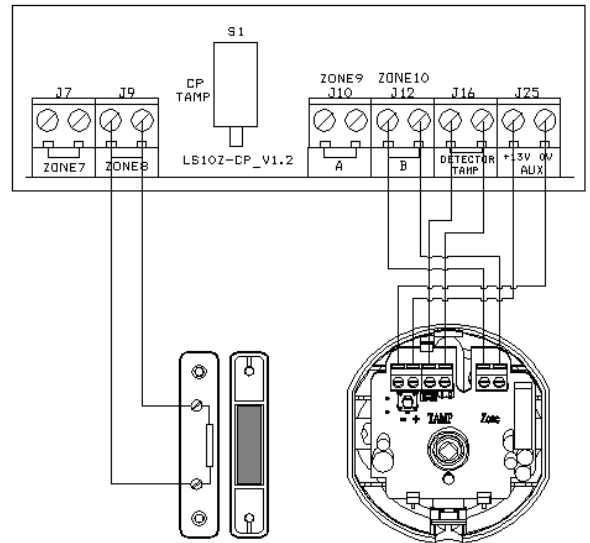


2.6 - Fire Zone Circuit

Any zone may be programmed as a fire zone. This will automatically exclude the availability of the zone from programs and normal security applications.

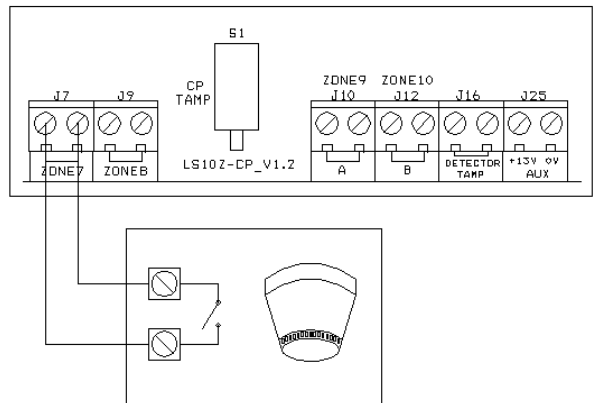

2.7 - Tamper Zone Circuit


Any zone may be programmed as a Tamper zone. Operational in Day and set, the Tamper circuit will cause a full alarm condition when activated.

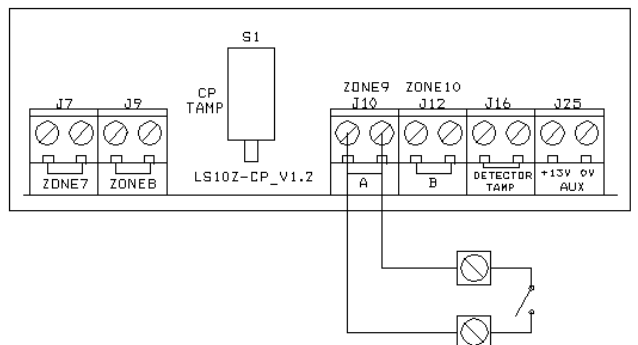

2.8 - PA Zone Circuit

Any quantity of normally closed type personal attack button may be wired in series and then connected to the PA circuit.

Operational in Day and set, the PA circuit will cause a full alarm condition when activated. PA is indicated on the control panel or RKP as Attack.

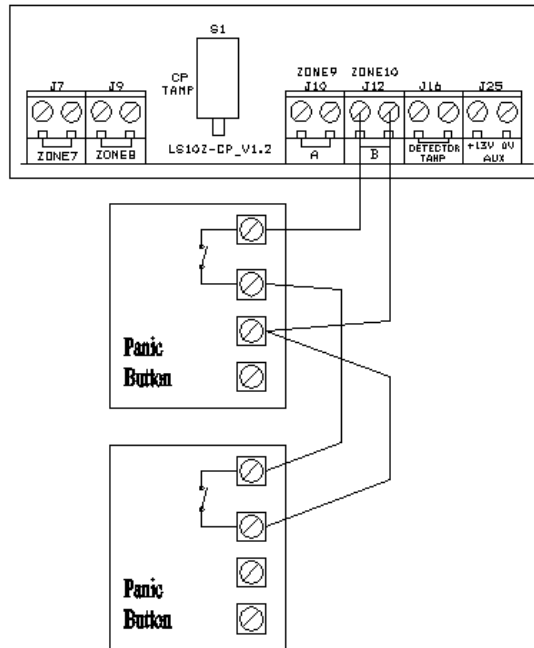


2.9 - Extension speaker (Internal Sounder)

Extension speaker may be connected to the loudspeaker terminals to produce high volume alarm tones and low volume entry/exit/fault tones.

External speaker connects to control panel

Only one 16 ohms extension speakers may be wired across the speaker terminals. Mounted in convenient positions within the installation the extension speakers will reproduce all of the alarm tones generated by the control panel.

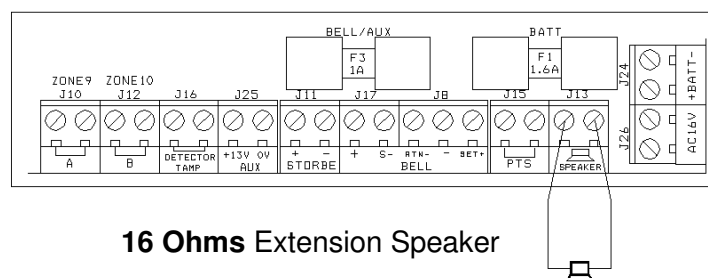

16 Ohms Extension Speaker

A control marked VOLUME in the center of the board may be used to adjust the low volume entry/exit tones to suit environmental conditions.

2.10 - External Siren Output (Bell box)

The external siren (bell box) is usually installed in a high position from where the siren could be seen and heard.


Terminal + S- RTN- - are for connection to the external siren. These terminals provide a power/hold –off supply, sounder trigger and tamper circuit to protect the external siren housing.

The terminals are summarized as follows:

- + +Ve supply (13V)
- S- -Ve Sounder trigger
- RTN- -Ve tamper return
- -Ve supply (0)
- Strobe - and strobe +


Where a discrete external siren is used, it should be connected to terminals + & S-. Terminals RTN- & - are then used for tamper protection for the housing.

Bell box wiring to control panel

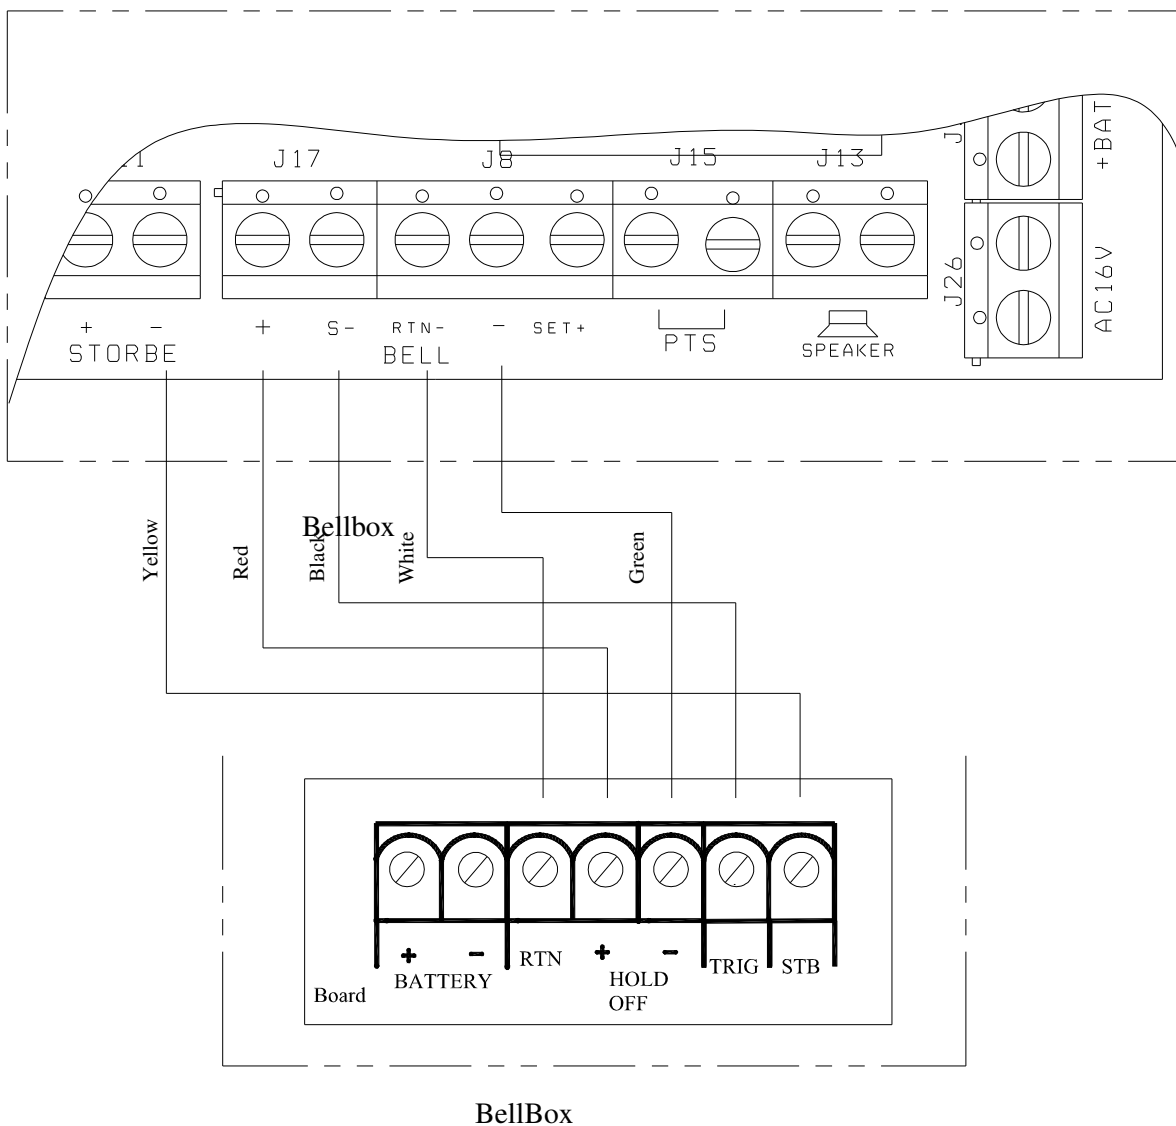


2.10.1 - Vortex II wiring to control panel

Vortex II wiring to control panel

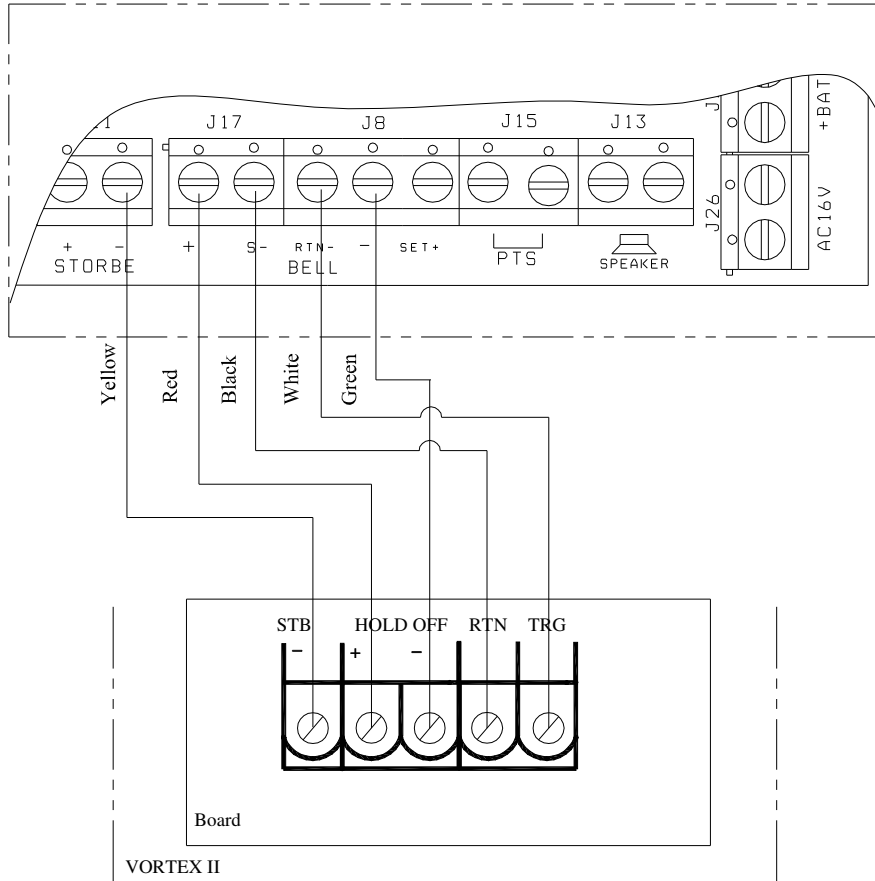


2.10.2 - Solar bell wiring to control panel

Solar bell wiring to control panel

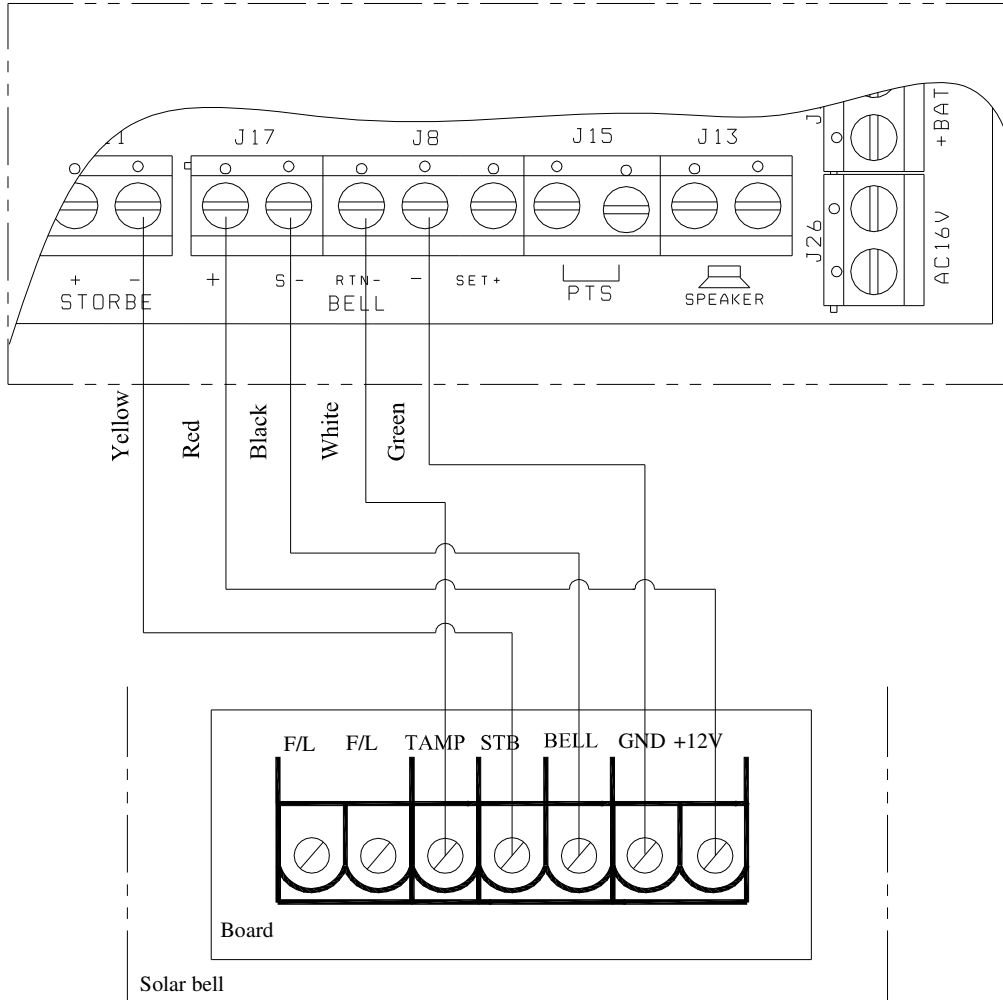

2.10.3 - AD2510 wiring to control panel

AD2510 wiring to Control panel

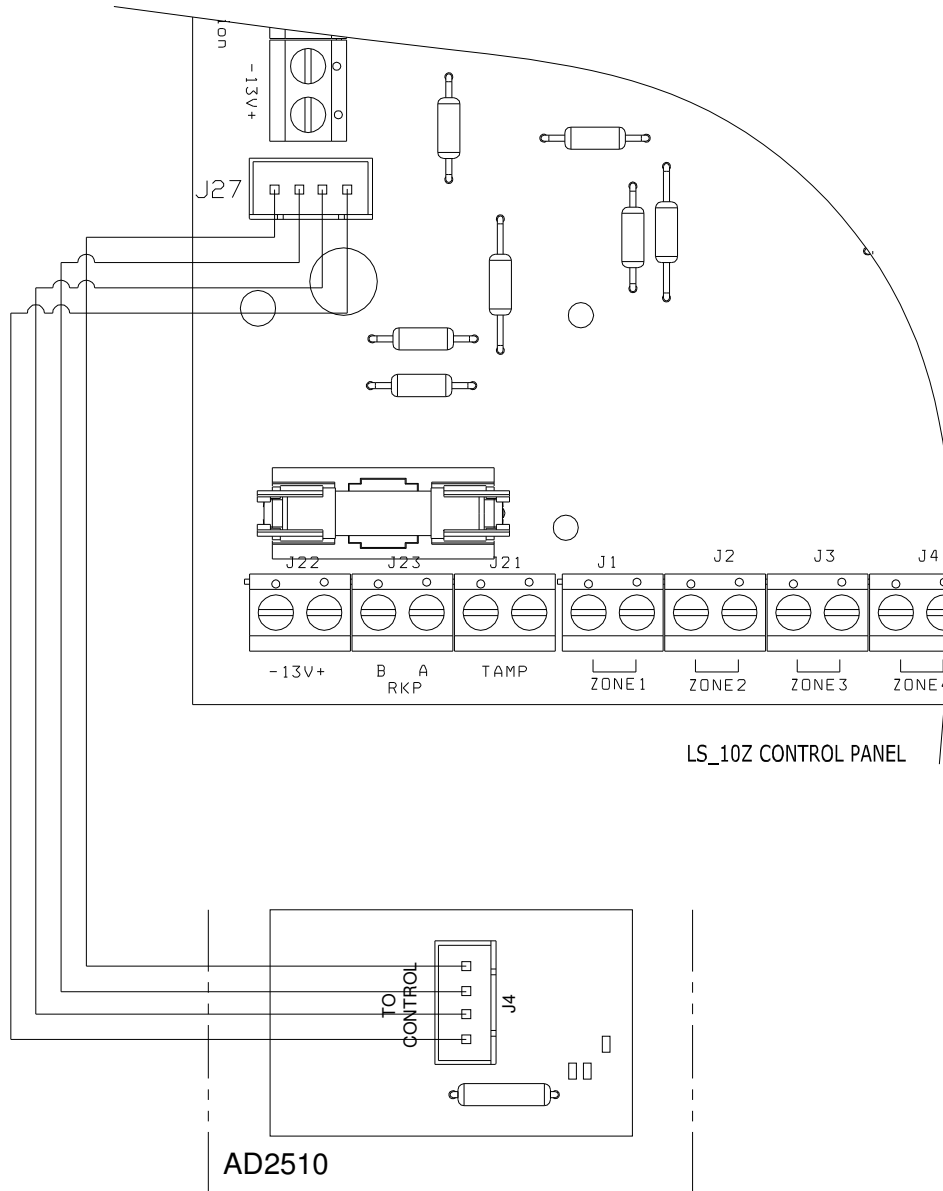

2.11 - 13V Supply Output

The 13V output is to power detectors which require a voltage supply (PIR detector etc). The supply is present at all times and may be used to supply a total of 350mA.

2.12 - Set

The output marked SET becomes positive on correct Set of the system and is removed by entry of a valid user code.

Section 3 – Factory Default Setting

System status

User code 1-10 : Not used
 Holiday code : Not used
 Manager code : 0123
 Engineer code : 9999

 Bell time : 14 minutes
 Bell delay time : No delay
 Rearm Count : 3 Rearms
 Service Date : 01/01/09
 System Time : 00:00:00
 System Date : 08-08-08
 Alarm INFO text is Null

 Zone type : Security
 Omit Allowed : Off
 Double Knock : Off
 Chime : Off

System flag

Silent PA : Off
 RKP PA : On
 Engineer Reset : Off
 PA user Reset : On
 Fire user Reset : On
 Bell in Fire : On
 Disable Bell Tamper : Off
 Lock Engineer Code : Off
 Auto walk test exit : Off

 Key Switch : Off
 PTS as DoorBell : Off
 Strobe on SET : On
 Single key SET : Off
 EOLR zone : Off
 EN compliant : Off
 Daylight Saving : Off
 Service Timer : Off

SET mode

Full mode:
 Zone 1 : Timed
 Zone 2 : Inhibited
 Zone 3-8, : Immediate
 Zone A[9] : Tamper/24H[Immediate]
 Zone B[10] : PA[Immediate]
 Exit Mode : Timed Exit
 Exit Time : 45 sec
 Entry Time : 45 sec

Part 1 mode:
 Zone 1,2 : Timed
 Zone 3-8 : Immediate
 Zone A[9] : Not Used
 Zone B[10] : Not Used
 Exit Mode : Timed Exit
 Exit Time : 45 sec
 Entry Time : 45 sec


Part 2 mode : Disabled

Indications on the system

Indications	
LED steady on indication	✱
LED flashing indication	◉
LED off	○
Internal Sound	🔊
External Device: Strobe	☀️
External Siren: Bell	🔔

Defaulting Manager code and Engineer code


1. Power down panel.
2. Remove wiring from SET output and TAMP input.
3. Fit shorting wire between SET and right-hand TAMP terminal.
4. Power up.
5. Wait for alarm to start.
6. Power down panel and then restore original wiring.

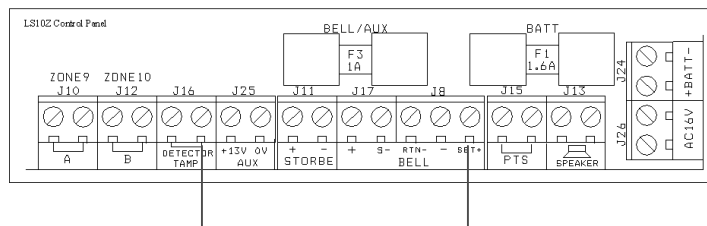

Section 4 - Mains Connection

The mains power should be connected using a 3 core cable of not less than 1mm sq. from a fused spur to the mains connector inside the control panel.

NOTE: The mains supply must be connected by a technically competent person and according to current IEE regulations.

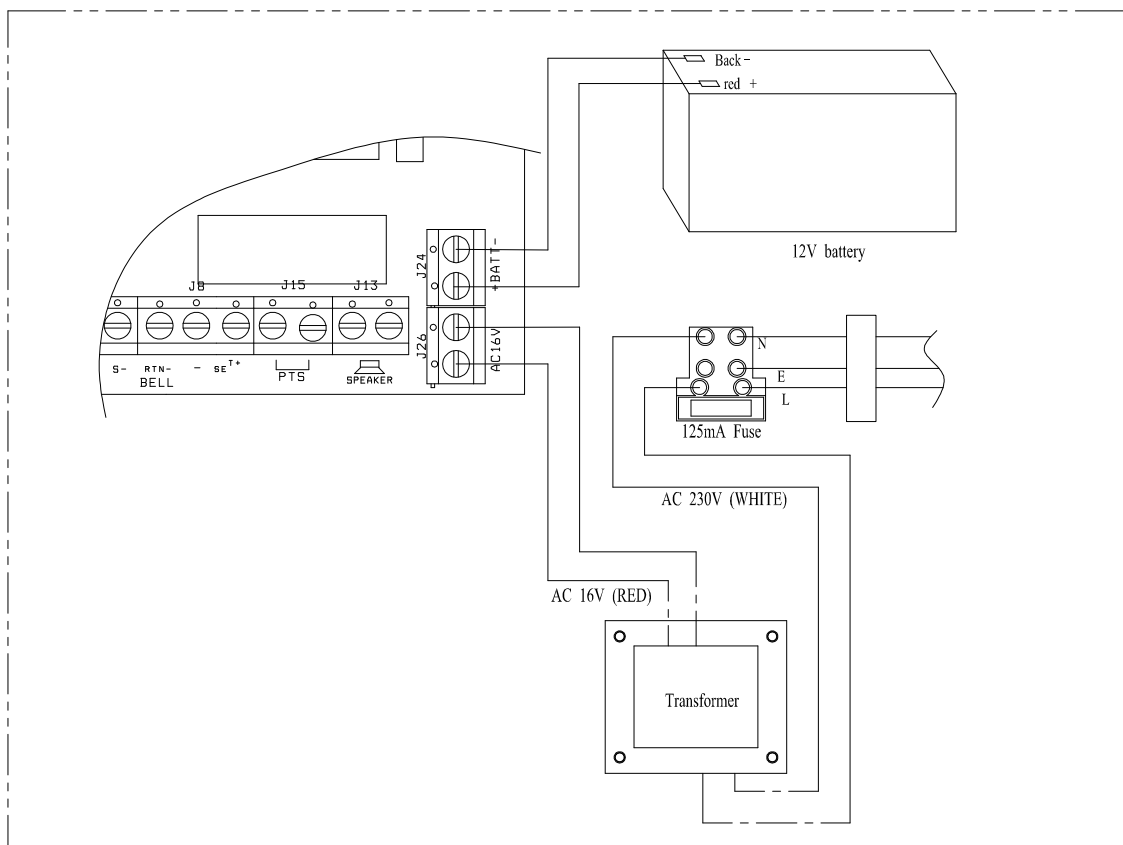

CAUTION: To avoid the risk of electrical shock you must always totally isolate the mains supply before opening the control panel cover(s).

Mains input fuse rating: 125mA, 250V type.

On connecting the mains supply to the panel the power indicator is lit. * Power

Testing the System

Complete the wiring of the system and then:


- Fully test the system and ensure it is fault free.
- Fully program the system.
- Fill in the installation log at the back of the manual and retain it for future reference.
- Finally explain the operation of the system to the end user.

Section 5 - First Power Up


Before power up, for LED panel only – fit the top cover on to the base and connect the speaker wires. Leave the cover in position throughout the reset of the installation.

- Check that the factory fitted links are connected to terminals TAMP and RTN-& -.
- Fit the battery wires to the BATT terminals on the Board, Red to +and Black to -.
- On connecting the battery the system will now go into alarm condition and Day LED is indication.


LCD INDICATIONS




LED INDICATIONS

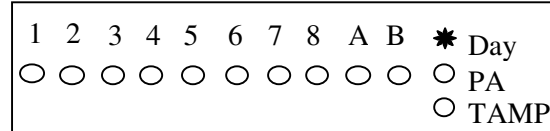


- Fit the cover to hold down the tamper spring at the bottom right-hand of the board.
- Enter User code / Manager code **0 1 2 3** (factory set code).

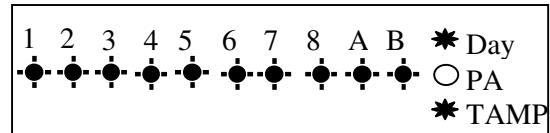

- Press **RESET** to return to Day mode.

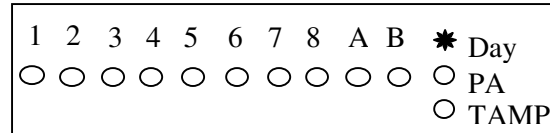

- Immediately enter the engineer code 9-9-9-9 factory default setting
- The system will go into Engineer program mode. Under engineer mode, you can program.

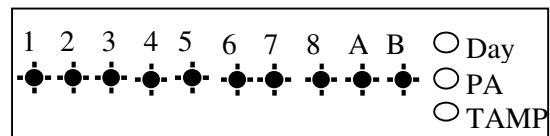

Engineer Program Mode

The control panel may be programmed to suit a wide variety of installations.

Once the engineer program mode has been accessed, each configuration may be changed in any order.

Before entering engineer program mode the system should be in the Day mode, with the Day and PWR indicators lit.

Section 6 – How to Set up the system

The full menu structure for the panel can only be accessed while in Engineer Program Mode. The structure is shown in the following table:

MENU OPTIONS	
1 Setup Programs	5 Setup System
2 Setup Zone Names and Types	6 Misc Menu
3 Setup Zone Attributes	7 View alarm log
4 Setup Codes	8 Test System

6.1 - LCD Keypad

6.1.1 - Setup Programs

How to enter Engineer Program Mode

You require the manager to authorize Engineer access. It is accessed directly from Day mode via the Engineer code.

To operate the “**Enter Engineer operation mode**” as follow:

LCD Remote Keypad:

- Enter Manager program mode
Press **PROG** **0** **1** **2** **3**
- Press **3** key for the Manager to authorize Engineer access.
- Press **PROG** to accept. It will give a 3hr window to use the Engineer operation mode.
- Press **PROG** to accept, the accept tone will be generated.
- Press **RESET** to go back DAY mode.
- Input 4-digit Engineer code **9** **9** **9** **9** and go to Engineer operation window within 5 seconds.

MANAGER MENU
Setup Codes?

MANAGER MENU
Authorise Engr?

Engr Authorised
for 3 hours

MANAGER MENU
Set Chime Zones?

00:26:15 08-Aug
DAY

LC ENGINEER MENU
Setup Programs?

6.1.1.1 - How to go into Full mode Setting**LCD Remote Keypad:**

- Under Engineer mode.
- Press **1** **PROG** to Select **Setup Programs**.

**LC ENGINEER MENU
Setup Programs?**

- Press **1** **PROG** to accept and go into **Program Full**.

**SELECT PROGRAM
Program Full?**

6.1.1.2 - How to go into Part 1 mode Setting**LCD Remote Keypad:**

- Under Engineer mode.
- Press **1** **PROG** to Select **Setup Programs**.

**LC ENGINEER MENU
Setup Programs?**

- Press **2** **PROG** to accept and go into **Program Part 1**.

**SELECT PROGRAM
Program Part 1?**

6.1.1.3 - How to go into Part 2 mode Setting**LCD Remote Keypad:**

- Under Engineer mode.
- Press **1** **PROG** to Select **Setup Programs**.

**LC ENGINEER MENU
Setup Programs?**

- Press **3** **PROG** to accept and go into **Program Part 2**.

**SELECT PROGRAM
Program Part 2?**

6.1.1.4 - How to set zone function

In **Zone Function**, Security type zones can be assigned different functions. These are **1= Immediate Zone, 2 = Timed Zone, 3 = Inhibited Zone, 0 = Not Used**.

Immediate Zone:

Use this function when the zone is not part of an entry/exit route. When the system is **SET**, activation of an immediate zone will cause a full alarm condition.

Timed Zone:

A time zone would be used to protect an entry/exit route. Opening the door or triggering the sensor in this type of zone when the system is **SET** will start the entry timer.

Inhibited Zone:

A time-inhibited zone operates as an immediate zone unless a timed zone has been operated and a timer started. Such a zone should be utilized to allow passage between the entry/exit door and the keypad when there are detectors present.

Not Used:

If the zone set as a not used zone. When the system is **SET**, activation of the zone will not cause a full alarm condition

LCD Remote Keypad:

Under Engineer Menu/Setup Program, the program mode is chosen.

• Press **1** **PROG** go into **zone functions** function.

• Select Zone No. using **OMT** or **key**.

Note: Zone No. not displayed means this zone isn't selected "Security"

Under <Engineer Menu / Setup Zones Type / Type> p.23

• Press **PROG** to accept. Display zone current function.

• If press **1** to select **Immediate zone** function.

• If press **2** to select **Timed zone** function.

• If press **3** to select **Inhibited zone** function.

• If press **0** to select **Not used** function.

• Press **PROG** to accept and return to next zone option or press **RESET** to cancel and exit.

SETUP PROGRAM
Zone Functions?

SELECT ZONE
Z1: Zone 1 name?

Zone Function
Immediate zone?

Zone Function
Immediate zone?

Zone Function
Timed zone?

Zone Function
Inhibited zone?

Zone Function
Not used?

SELECT ZONE
Z2: Zone 2 name?

6.1.1.5 - How to set Exit mode function

There are four selections for **Exit Mode** in all mode: **1 = Timed Exit**, **2 = Final Door**, **3 = Silent Exit**, **4 = Terminated**, **0 = Disable**.

Timed Exit:

A timed program will set once the exit timer has expired and all zones are clear.

Final Door:

A final door program will set 5 seconds after the final door has been opened and closed.

Silent Exit:

This operates exactly the same as **Timed Exit** but completely silent without internal sounder signal.

Terminated:

A terminated program will set once the PTS terminal has been trigger.

Disable:

A disabled program is not available for use and cannot be selected and setting time.

LCD Remote Keypad:

Under Engineer Menu/Setup Program, the program mode is chosen.

- Press **2** go into **Exit mode** function.
- Press **PROG** to accept. Display current exit mode function.
- If press **1** to select **Timed exit** function.
- If press **2** to select **Final door** function.
- If press **3** to select **Silent exit** function.
- If press **4** to select **Terminated** function.
- If press **0** to select **Disabled** function.
- Press **PROG** to save the exit mode that you selected above, or press **RESET** to cancel, it will exit and go to “Exit Time”.

SETUP PROGRAM
Exit Mode?

SELECT EXIT MODE
Timed exit?

SELECT EXIT MODE
Timed exit?

SELECT EXIT MODE
Final door?

SELECT EXIT MODE
Silent exit?

SELECT EXIT MODE
Terminated?

SELECT EXIT MODE
Disabled?

SETUP PROGRAM
Exit Time?

6.1.1.6 - How to set Exit time function

This is the time allowed to leave the premises via the exit route before the system sets. The programmable range is 00-99 seconds.

If the **Exit Time** is interrupted with the last 10 seconds, then the **Exit Time** will restart at 10 seconds after the interruption has cleared.

The default is 45 seconds.

LCD Remote Keypad:

Under Engineer Menu/Setup Program, the program mode is chosen.

- Press **3** to select **Exit Time** function.
- Press **PROG** to accept. Display current exit time number.

Set the time by pressing number key. The range is 00-99.
eg. Set the exit time 20 seconds.

- Press **2** number key, cursor move to next a char.

SETUP PROGRAM
Exit Time?

Exit Time
? 45

Exit Time
? 25

- Then press **0** number key, cursor move to next a char.

Exit Time
? 20_

- Press **PROG** to save it, or press **RESET** to cancel, it will exit and go to “Entry Time”.

SETUP PROGRAM
Entry Time?

6.1.1.7 - How to set Entry time function

This is the time allowed to enter the premises via the entry route and unset the system. The programmable range is 00-99 seconds. The default is 45 seconds.

LCD Remote Keypad:

Under Engineer Menu/Setup Program, the program mode is chosen.

- Press **4** go into **Entry Time** function.
- Press **PROG** to accept. Display current exit time number.

SETUP PROGRAM
Entry Time?

Entry Time
? 45

Set the time by pressing number key. The range is 00-99.
eg. Set the entry time 20 seconds.

- Press **2** number key, cursor move to next a char.
- Then press **0** number key, cursor move to next a char.

EntryTime
? 2_

Entry Time
? 20_

- Press **PROG** to accept or press **RESET** to cancel. It goes to next program mode, if the current mode is “**Program Part 2**”, it will leave “**Setup Programs**” and go to next menu “**Setup Zone Type**”.

LC ENGINEER MENU
Setup Zones Type?

6.1.2 - Setup Zones Type

The ‘Setup Zones Type’ contains: 1 = Zone name, 2 = Zone type.

6.1.2.1 - How to set Zone Name

This option allows each of the ten zones to be given a name.
e.g. Change zone 5 name to Bedroom 1.

LCD Remote Keypad:

Under Engineer Menu.

- Press **2** to select **Setup Zone Type** function.

SETUP PROGRAM
Setup Zone Type?

- Press **PROG** to accept.

SELECT ZONE
Zone 1?

- Press **5** **PROG** keys to select zone 5.

Note: **1** =zone 1, **2** =zone 2, ... **0** = zone 10

SELECT ZONE TYPE
Name?

- Press **1** **PROG** keys go into setup zone name function.

ZONE NAME
? Zone 5_

Press **⏪** key, it will clear the last character.

ZONE NAME
? Zone _

- Press **OMT** key, it will clear the line text.

ZONE NAME
? _

[0]..[9] key have different characters.

0 _0 **1** ,)?1 **2** abc2 **3** def3

4 ghi4 **5** jkl5 **6** mno6 **7** pqrs7

8 tuv8 **9** wxyz9

- Press **2** key twice within 3 seconds, 'B' can be shown on LCD.

ZONE NAME
? B_

• Press **SET** key, it will toggles capitals (exchange between capital and lowercase), ABC-abc. default input capital character.

- Press **3** key twice within 3 seconds, 'e' can be shown on LCD.

ZONE NAME
? Be_

- Input "Bedroom 1" string.

ZONE NAME
? Bedroom 1_

- Press **PROG** key to accept input and save the text,
- Press **RESET** key will exit without change to the text.

SELECT ZONE TYPE
Type?

6.1.2.2 - How to set Zone Type

There are six types for Zone: **1 = Security**, **2 = PA**, **3 = Door Bell**, **4 = Fire**, **5 = Tamper/24H**, **0 = Not Used**.

Security:

The system comes supplied with service links fitted to the zone terminals to simulate a closed circuit. As each zone is connected these links should be removed. All zone are fully programmable.

PA:

A Zone may be programmed for audible PA should be wire in series.

Door Bell:

This feature can be programmed into any Zone. A doorbell will not operate whilst the entry/exit timers have started, when the system is in full alarm condition or whilst in programming mode.

Fire:

If you choose to utilize a zone as a fire zone then no other detectors may be wired into this zone. Therefore a zone cannot be both fire and intruder.

Tamper/24H:

Provides 24 hour monitoring.

Not used

A zone may be programmed for Not used, then is ignored by the panel.

To operate the Setup Zone type as follow.

e.g. Change zone 5 type to Fire zone.

LCD Remote Keypad:

Under Engineer Menu.

• Press **2** **PROG** keys go into **Setup Zone Type** function.

SETUP PROGRAM
Setup Zone Type?

• Press **5** **PROG** keys to select zone 5.

SELECT ZONE
Zone 1?

Note: **1** =zone 1, **2** =zone 2, ... **0** = zone 10

• Press **2** key to select setup zone type function.

SETUP ZONE TYPE
Type?

• Press **PROG** key to go into Select Zone Type function.

SELECT ZONE TYPE
Security?

• Press **4** key to select Fire zone type.

SELECT ZONE TYPE
Fire?

• Press **PROG** to save, or press **RESET** to cancel. it goes to next Zone.
 If the Zone is “**Zone 10**”, it will leave “**Setup Zone type**” and go to next menu “**Setup Zone Attributes**”.

LC ENGINEER MENU
Setup Zone Attr?

6.1.3 - Setup Zones Attributes

There are three attributes for Zones: 1 = Omit Allowed, 2 = Double Knock, 3 = Chime. You can set it ON or OFF.

Omit Allowed:

When a Zone is programmed as Omit Allowed, the panel allows the Zone to be omitted for one set period by the user when setting the system.

Note: The zone must be a security zone for it to be set omit allowed.

Double Knock:

Double knock programming is used when zones are likely to create false activations.

Double knock requires two activations within 10 minutes of the same Zone or a Zone left open for 10 seconds.

Chime:

If a Security Zone is programmed as Chime, you can hear special tone when it is triggered in DAY mode.

Note: The zone must be to security for it to be set to Chime.

To operate the Setup Zone attributes as follow.

e.g. Set zone 2 have Omit Allowed, Double Knock and Chime attributes (set ON).

LCD Remote Keypad:

Under Engineer Menu.

• Press **3** **PROG** keys go into **Setup Zone Attribute** function.

LC ENGINEER MENU
Setup Zone Attr?

• Press **2** **PROG** keys to select zone 2.

SELECT ZONE
Zone 2?

Note: **1** =zone 1, **2** =zone 2, ... **0** = zone 10

SELECT ATTRIBUTE
Omit Allowed?

• Press **1** **PROG** key to go into setup Zone Omit Allowed function





Omit Allowed
OFF?

• Press **⏮** or **⏭** key to toggle ON/OFF,
 Press **PROG** to save, or press **RESET** to cancel.



SELECT ATTRIBUTE
Double Knock?

• Press **2** **PROG** key to go into setup Zone Double Knock function

Double Knock
OFF?

- Press  or  key to toggle ON/OFF,
Press  to save, or press  to cancel.

**SELECT ATTRIBUTE
Chime?**

- Press   key to go into setup Zone Chime Attributes.

- Press  or  key to toggle ON/OFF,
- Press  to save, or press  to cancel. it goes to next Zone.

If the Zone is “**Zone 10**”, it will leave “**Setup Zone Attr**” and go to next menu “**Setup Codes**”.

**LC ENGINEER MENU
Setup Codes?**

6.1.4 - Setup Codes

6.1.4.1 - How to set up User Code

There are 10 user codes that can be created and set by LCD Keypad in the system, all are 4-digit and can be set to any number from 0000 to 9999. The access codes ensure that only authorized users can operate the system.

1 = user 1, 2 = user 2, 3 = user 3, 4 = user 4, 5 = user 5, 6 = user 6, 7 = user 7,
8 = user 8, 9 = user 9, 0 = user 10.

User 1 – User 10 codes:

The user 1 –user 10 codes have the same operation for testing and Setting and Unsetting, changing their own code.

Holiday code:

The purpose of this code is to allow access to the property whilst the manager is absent. The Holiday access code is programmed by the Manager and is only valid until the manager use’s the system. At this point the Holiday code becomes invalid and is no longer accepted by the control panel.

Engineer code:

Access the Engineer program mode to allow the system to be programmed. If configured the Engineer’s code can be used to reset the system after an alarm.

NOTE: Entering an invalid user code over 4 times, the keypad will be locked out 90 seconds. After 9 incorrect code entries an alarm/ tamper condition will be generated.

6.1.4.2 - How to change User Name

This option allows each of the users to be given a name.

LCD Remote Keypad:

Under Engineer Menu.

- Press **4** **PROG** keys go into **Setup Codes** function.



- Press **1** ... **9** or **0** or **ENT** or **↓** key to select a code that you want to set.




Note: **1** =user 1, **2** = user 2, ... **0** = user 10

or press **↓** key to select Holiday, Engineer.

- Press **PROG** to accept and go into set the user.



- Press **1** **PROG** keys go into setup change user name function.



- Enter new name string.

How to input string text refer to page 22, How to set zone name.

- Press **PROG** key to accept input and save the text,
- Press **RESET** key will without change the text and exit.



6.1.4.3 - How to change User Code

This option allows each of the users to be given a code.

LCD Remote Keypad:

Under Engineer Menu.

- Press **4** **PROG** keys go into **Setup Codes** function.



- Press **1** ... **9** or **0** or **ENT** or **↓** key to select a code that you want to set.



Note: **1** =user 1, **2** = user 2, ... **0** = user 10




or press **↓** key to select Holiday, Engineer.

- Press **PROG** to accept and go into set the user.



- Press **2** key to select **Change Code** function.



- Press  key go into **Change Code** function.
- If the previous user code not used, then display.
- Input 4-digit, if you input error key, the error tone will be generated.
- Press  to save. If the 4-digit is the same as other codes, then display and error tone generate, press any key to leave, it goes to “Delete Code”
- Press  key will not change the code and exit.

USER CODE
? ****















USER CODE
? _ . . .

Duplicate Code!

6.1.4.4 - How to delete User Code

LCD Remote Keypad:

Under Engineer Menu.

- Press   keys go into **Setup Codes** function.
 - Press  ...  or  or  or  key to select a code that you want to set.
- Note:  =user 1,  = user 2, ...  = user 10
- or press  key to select Holiday, Engineer.
- Press  to accept and go into set the user.
 - Press  key to select **Delete Code** function.
 - Press  key will delete the user code..
 - Press any key to go to modify next code, if the code is “**Engineer codes**”, it will leave “**Setup Codes**” and go to next menu “**Setup System**”.

SETUP PROGRAM
Setup Codes?

SELECT CODE
User 1?

SETUP CODE
Change Name?

SETUP CODE
Delete Code?

Code Deleted!

SETUP PROGRAM
Setup System?

6.1.5 - Setup system

The catalog of Setup system contains eight parts. They are list as follow:

1 = Flags1, 2 = Flags2, 3 = Bell Time, 4 = Rearm count, 5 = Bell delay time, 6 = Set Time, 7 = Set Date, 8 = Service Date.

6.1.5.1 - How to Setup System Flags

The System Flags are divided into Flags1, 2.

Flag1 – Options

There are eight options under Flag1 which are described below:

2=RKP PA, 3=Engineer Reset, 4=PA user Reset, 5=Fire user Reset, 6=Bell in Fire, 7=Disable Bell Tamper, 8=lock Engineer Code, 9=Exit Walk Test

RKP PA

When this flag is set to ON, the keypad's PA function is enabled.

Engineer Reset

When this flag is set to ON, an engineer code must be entered to reset the system after Tamper, PA or Fire alarm. When the flag is set to OFF the system can be reset by the user.

PA user Reset

When this flag is set to ON, it permits the user to reset the system after a PA alarm, by pressing user code. The user can reset the system even if the **Engineer Reset** flag is set to ON.

Fire user Reset

When this flag is set to ON, it permits user to reset the system after a Fire alarm by pressing user code. The user can reset the system even if the **Engineer Reset** flag is set to ON.

Bell in Fire

When this flag is set to ON, the external siren Bell box will sound On/two second off during the fire alarm.

Disable Bell Tamper

When this flag is set to ON, when the Bell Tamper is trigger in FULL, Part1, Part2 mode the alarm system will not process it.

Lock Engineer Code

When this flag is set to ON, the system can't reset the engineer code to default when you use "Reset NVM" command.

Exit Walk Test

When this flag is set to ON, it will automatically return to next option after 20 minutes.

To operate Flag 1 as follow.

Under Engineer Menu.

- Press **5** **PROG** keys go into **Setup System** function.
- Press **1** **PROG** keys go into **Setup Flags 1**
- Press **2** key to select **RKP PA** function.
- Press **3** key to select **Engineer reset** function.
- Press **4** key to select **PA user reset** function.
- Press **5** key to select **Fire user reset** function.
- Press **6** key to select **Bell in Fire** function.
- Press **7** key to select **Disable Bell Tamper** function.
- Press **8** key to select **Lock Engineer Code** function.
- Press **9** key to select **Exit Walk Test** function.
- Press **PROG** key accept be selected flag.
- Press **↓** or **↑** key to toggle ON/OFF,
- Press **PROG** to save, or press **RESET** to cancel. it goes to next flag.

**SETUP SYSTEM
Flags 1?**

**SELECT FLAG 1
Silent PA?**

**SELECT FLAG 1
RKP PA?**

**SELECT FLAG 1
Engineer reset?**

**SELECT FLAG 1
PA user reset?**

**SELECT FLAG 1
Fire user reset?**

**SELECT FLAG 1
Bell in Fire?**

**SELECT FLAG 1
Dis Bell Tamper?**

**SELECT FLAG 1
Lock Engr Code?**

**SELECT FLAG 1
Exit Walk Test?**

**Exit Walk Test
OFF**

**Exit Walk Test
ON**

**SETUP SYSTEM
Flags 2?**

Flag2 – Options

There are eight options under Flag2 which are described below:

1=Key switch, 2=Doorbell, 3=Strobe on Set, 4=Single key Set, 5=EN Compliant, 6=EOLR Zone
7=Daylight Saving, 8=Service Timer

PTS as Keyswitch

When this flag is set to ON, this enables the system to be SET and UNSET with the use of a key switch in PTS terminal. If the panel needs to be reset then a manager/user code must be entered.

PTS as Doorbell

When this flag is set to ON, Keyswitch = OFF, the PTS terminal is programmed to a doorbell, if the Keyswitch = ON, the PTS terminal is used as Keyswitch.

Strobe on Set

When this flag is set to ON, the external strobe will stay on for five seconds once the panel has set.

Single key Set


When this flag is set to ON, it allows the panel to be set Full mode by pressing the [Set] button, set Part 1 mode by pressing [▲] key, set Part 2 mode by pressing [▼] key. A code entry is not required. However, a 4-digit code is required to Unset the panel.

EN Compliant

When this flag is set to ON, the alarm system has Battery Monitoring function.

EOLR Zone

When this flag is set to ON, the alarm system goes to EOLR mode. Each detector must have a 2k2 resistor connected across its alarm contacts. In addition, a 2k2 resistor must be connected across the end of the Zone wiring, as shown in the following diagram. Note the PIR detectors usually have a “spare” terminal for this purpose.

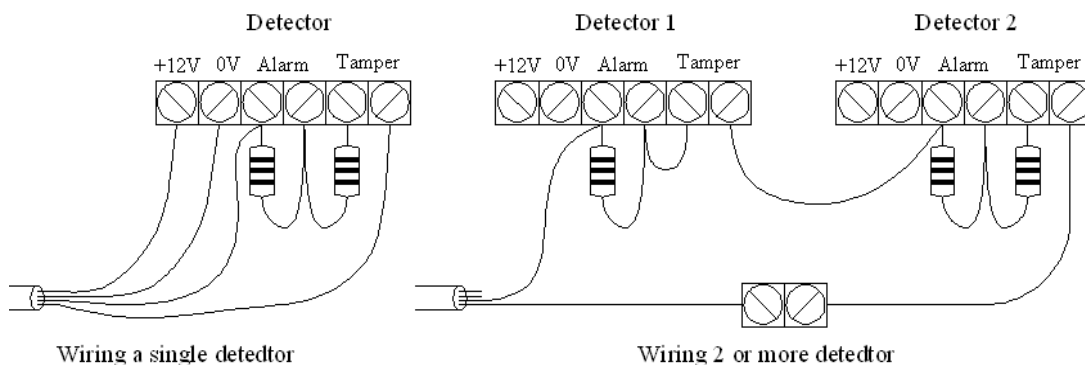

Daylight Saving

When this flag is set to ON, the system will turn clock back 1 hour 2 am on the first Sunday in Apr and ahead 1 hour 2 am on the first Sunday in Oct.

Service Timer

When this flag is set to ON, the user can use the alarm system during Service Time.

To operate Flag 2 as follow.

Under Engineer Menu.

- Press **5** **PROG** keys go into **Setup System** function.

**SETUP SYSTEM
Flags 1?**

- Press **2** **PROG** keys go into **Setup Flags 2**

**SELECT FLAG 2
Keyswitch?**

- Press **1** key to select **Key switch** function.

**SELECT FLAG 2
Keyswitch?**

- Press **2** key to select **PTS as Doorbell** function.

**SELECT FLAG 2
PTS as Doorbell?**

- Press **3** key to select **Strobe on SET** function.

**SELECT FLAG 2
Strobe on SET?**

- Press **4** key to select **Single key SET** function.

**SELECT FLAG 2
Single key SET?**

- Press **5** key to select **EN Compliant** function.

**SELECT FLAG 2
EN Compliant?**

- Press **6** key to select **EOLR Zone** function.

**SELECT FLAG 2
EOLR Zone?**

- Press **7** key to select **Daylight Saving** function.

**SELECT FLAG 2
Daylight Saving?**

- Press **8** key to select **Service Timer** function.

**SELECT FLAG 2
Service Timer?**

- Press **PROG** key accept be selected flag.

**Service Timer
OFF**

- Press **⏸** or **⏪** key to toggle ON/OFF.

**Service Timer
ON**

- Press **PROG** to save, or press **RESET** to cancel.

**SETUP SYSTEM
Bell Time?**

6.1.5.2 - How to Setup Bell Time

This is the duration that the external bell output is active. The range is 01-20 minutes. The default is 14 minutes.

e.g. Change the **Bell Time** from 14 to 15 minutes.

LCD Remote Keypad:

Under Engineer Menu

- Press **5** **PROG** keys go into **Setup System** function.
- Press **3** to select **Bell Time** function.
- Press **PROG** to accept. Display current Bell time number.

SETUP SYSTEM
Flags 1?

SETUP SYSTEM
Bell Time?

Bell Time
? 14

Set the time by pressing number key. The range is 01-20.

- Press **1** number key, cursor move to next a char.
- Then press **5** number key, cursor move to next a char.
- Press **PROG** to save it, or press **RESET** to cancel, it will exit and go to "Rearm Count".

Bell Time
? 14

Bell Time
? 15

SETUP SYSTEM
Rearm Count?

6.1.5.3 - How to Setup Rearm count

After an alarm the panel will automatically rearm itself when the external siren (Bell) timer has expired. Any Zones and tamper, panic which still remain open at that time will be automatically omitted.

The default is 3 rearms. 0 = no rearms, 1-8= number of rearms, 9= always rearm

e.g. Change the **Rearm Count** from 3 to Always rearm.

LCD Remote Keypad:

Under Engineer Menu

- Press **5** **PROG** keys go into **Setup System** function.
- Press **4** to select **Rearm Count** function.
- Press **PROG** to accept. Display current Rearm count number.

SETUP SYSTEM
Flags 1?

SETUP SYSTEM
Rearm Count?

Rearm Count
? 3

Set the Rearm count by pressing number key. The range is 0-9.

- Press **9** number key.
- Press **PROG** to save it, or press **RESET** to cancel, it will exit and go to “**Bell Delay Time**”.

Rearm Count
? 9

SETUP SYSTEM
Bell Delay Time?

6.1.5.4 - How to Setup Bell delay time

This delays the activation of the Bell for the required time. The range is 00-99 minutes. The default is 00 minutes.

e.g. Change the Bell Delay time from 0 to 1 minute.

LCD Remote Keypad:

Under Engineer Menu

- Press **5** **PROG** keys go into **Setup System** function.
- Press **5** to select **Bell Delay Time** function.
- Press **PROG** to accept. Display current bell delay time.

SETUP SYSTEM
Flags 1?

SETUP SYSTEM
Bell Delay Time?

Bell Delay Time
? 00


Set the bell delay time by pressing number key. The range is 00-99.

- Press **0** **1** number keys.
- Press **PROG** to save it, or press **RESET** to cancel, it will exit and go to “**Set Time**”.

Bell Delay Time
? 01

SETUP SYSTEM
Set Time?

6.1.5.6 - How to Setup Set Time



The time can be modified in hours, minutes in the format HH:MM. you must set it correctly, or else System will generate an error tone and not save the change.  key will help you to select the bit that you want to write.

* Time and Date will be lost once the power supply from both main power and backup battery are cut

e.g. Change the system time to 12:02


LCD Remote Keypad:


Under Engineer Menu

• Press   keys go into **Setup System** function.



• Press  to select **Set Time** function.





• Press  to accept. Display current time.




set new time to 12:02







• Press     number keys.



• Press  to save it and clear second time, or press  to cancel, it will exit and go to “**Set Date**”.





6.1.5.7 - How to Setup Set Date


Before you set the date, you select day for the date that you want to set. Using  -  or  or  key to change day, pressing  key to save, pressing  key to not change. The date can be changed in day, month, year format DD/MM/YY. The method of set date is the same as how to set time.


e.g. Set current system date: Tuesday, 28-08-2009


LCD Remote Keypad:


Under Engineer Menu

• Press   keys go into **Setup System** function.



• Press  to select **Set Date** function.



• Press  to accept. Display current week.



- Select a week day No **2** , and Press **PROG** to accept.

SELECT DAY
Tuesday?

- Enter system date: Day/Mon/Year(6-digits)

Date: DD/MM/YY
08/08/08

- Press **2 8 0 8 0 9** number keys.

Date: DD/MM/YY
28/08/09

- Press **PROG** to save it, or press **RESET** to cancel, it will exit and go to “**Service Date**”.

SETUP SYSTEM
Service Date?

6.1.5.8 - How to Setup Service Date

You can use the alarm system before the Service data. The date can be changed in day, month, year format DD/MM/YY. The method of set date is the same as how to set time.

e.g. Set current system date: Tuesday, 30-12-2010

LCD Remote Keypad:

Under Engineer Menu

- Press **5** **PROG** keys go into **Setup System** function.

SETUP SYSTEM
Flags 1?

- Press **8** to select **Service Date** function and **PROG** to save it,

SETUP SYSTEM
Service Date?

- Enter system date: Day/Mon/Year(6-digits)

Date: DD/MM/YY
01/01/09

- Press **3 0 1 2 1 0** number keys.

Date: DD/MM/YY
30/12/10

- Press **PROG** to save it, or press **RESET** to cancel, it will exit and go to “**Misc Menu**”.

LC ENGINEER MENU
Misc Menu?

6.1.6 - Misc menu

“Misc menu” is divided into four parts:

1 = Show help, 2 = Challenger Tel, 3 = Alarm Co. Info, 4 = Reset NVM.

6.1.6.1 - How to Show Help file

It guides you to use the function key in different operation.

LCD Remote Keypad:

Under Engineer Menu

- Press **6** **PROG** keys go into **Misc Menu** function.
- Press **1** **PROG** keys go into **Show help** function.
- Press **↓** key show next page.
- Press **RESET** to cancel at any time, it will exit and go to **“Telephone No”**. Else help file finish will exit.


LC ENGINEER MENU
Misc Menu?




MISC MENU
Show help?



In help screens,
[▼] for nextpage

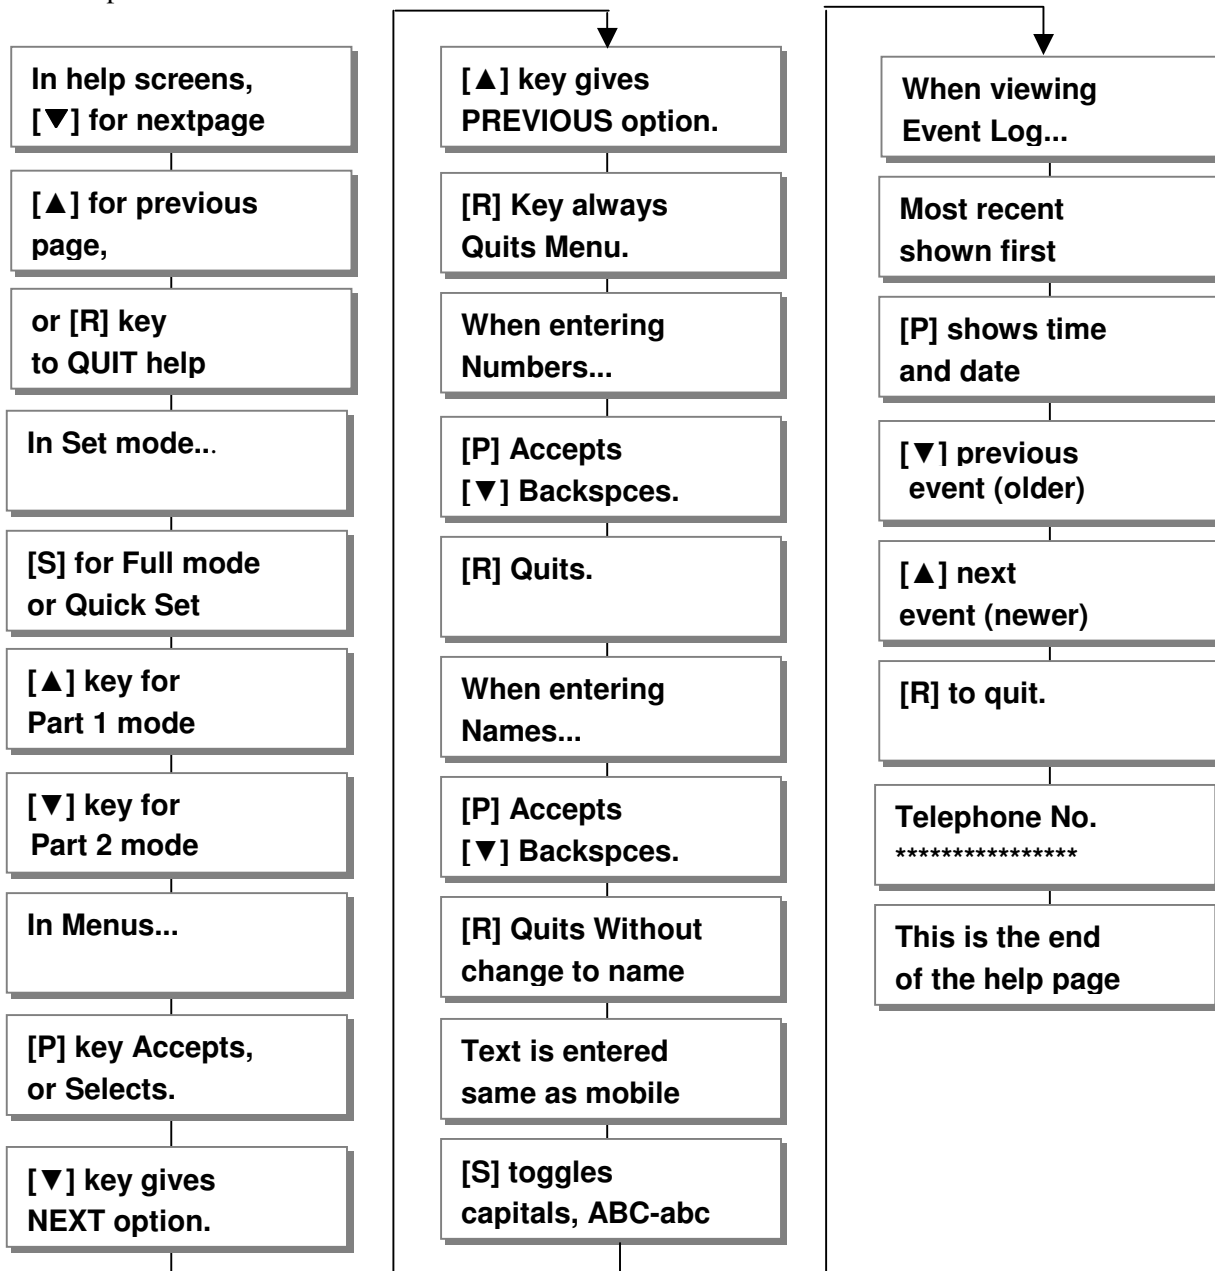MISC MENU
Telephone No.?

• Help file as follow:



Note: [P] using  key, [R] using  key, [S] using  key,

[▲] using  key, [▼] using  key.

6.1.6.2 - How to Show Telephone

It records the company telephone number that you buy the alarm system from.

LCD Remote Keypad:

Under Engineer Menu

- Press **6** **PROG** keys go into **Misc Menu** function.
- Press **2** key to select **Telephone No** function.
- Press **PROG** key show Telephone.
- Press any key will exit and go to **“Alarm Co. Info”**.

LC ENGINEER MENU
Misc Menu?

MISC MENU
Telephone No.?

Telephone No.

MISC MENU
Alarm Co. Info?

6.1.6.3 - How to modify alarm company information

You can write two lines of the information about your company in this menu. The max number of characters in one line is 14, so you can write 28 chars most in **“Alarm Co. Info”**

LCD Remote Keypad:

Under Engineer Menu

- Press **6** **PROG** keys go into **Misc Menu** function.
- Press **3** key to select **Alarm Co. Info** function.
- Press **PROG** key show Telephone.
- Enter new string . e.g. input **“ABCr”**.
How to input string text refer to page.22 , How to set zone name.
- Press **PROG** key to accept input and save the text,
Press **RESET** key to cancel and go to next option.
- Enter new string **“10 Zone System”**.
How to input string text refer to page.22 , How to set zone name.
- Press **PROG** key to accept input and save the text,
Press **RESET** key to cancel and exit.

LC ENGINEER MENU
Misc Menu?

MISC MENU
Alarm Co. Info?

First Line Text
?_

First Line Text
?ABC_

Second Line Text
?_

Second Line Text
?10 Zone System_

MISC MENU
Reset NVM?

6.1.6.4 - How to Restore to factory value using menu

You will change the value of all parameters to factory default value when you set it.

CAUTION: All configurations of the panel are reset to reset to factory default conditions.

To default to factory settings:

LCD Remote Keypad :

- Under Engineer menu
- Press **6** **PROG** go into **MISC MENU**
- Press **4** to select **Reset NVM** function
- Press **PROG** go into Reset NVM function.
- Press **PROG** to accept and system will generate an extended acceptance tone.
- Finished and return to next option.

LC ENGINEER MENU
Setup Program?

MISC MENU
Show Help?

MISC MENU
Reset NVM?

Are you sure?
Press P for yes



Extended acceptance tone

LC ENGINEER MENU
View Event Log?

NOTE 1 : If Lock Engineer flag is ON, Engineer Code can not reset to factory default

NOTE 2 : After reset, the zone A and B will be named as zone 9 and 10 respectively. The zone type of both zone 9 and 10 will be "Immediate".

6.1.7 - View Event Log

The event log gives a display of all the events that have taken place. The events are arranged by date and time. Up to 250 events can be stored in the memory. When the log reaches 250 events and another event takes place, the first event drops out. The system is known as FILO (First In Last Out).






To view the event log:

LCD Remote Keypad :

- Under Engineer menu
- Press **7** key to select **View Event Log** function.
- Press **PROG** to accept and most recent event shown first.

LC ENGINEER MENU
View Event Log?

Code Change
05:User 5

- View other event log using  or  key.
- View event happen time and date using  key.
- Press any key to return the currently event log when you view the time and data of it.
- Press  to accept and system will generate an extended acceptance tone. or press  key to leave
- Finished and return to next option.

Code Change
04:User 4

Time : 00 : 28
Date : 08 - Aug

Code Change
04:User 4

LC ENGINEER MENU
Test System?








6.1.8 - Test System

This function has four parts in Test System: **Test output, Walk Test, View Walk Test, Panel Version.**

6.1.8.1 - How to Test Outputs

The basic test outputs are: **0 = BELL, 1 = Strobe, 2 = Speaker,**

LCD Remote Keypad :

- Under Engineer menu
- Press  key to select **Test System** function.
- Press  key go into test system bell item.
- Press  key to select Bell output test.
- If press  key to select Strobe output test.
- If press  key to select speaker output test.
- Press  key to accept and The toggle test outputs ON, or press  key , it will leave the menu “Test System”.
- Press any key stop output and menu return to next test option. If the test output is “Abort”, it will go to “Walk Test”.

LC ENGINEER MENU
Test System?

TEST SYSTEM
Bell?

TEST SYSTEM
Bell?

TEST SYSTEM
Strobe?

TEST SYSTEM
Speaker?

BELL is ON
Press any key

TEST SYSTEM
Walk Test?

6.1.8.2 - How to enter Walk Test

The walk test function allows check each Zone trigger, Zone tamper, Detect Tamper, Control panel tamper, Bell Box tamper, Remote Keypad tamper. in order to verify that they are functioning correctly. A tone is generated as each zone or tamper is activated (opened).

e.g. Trigger Zone and Zone tamper

LCD Remote Keypad :

- Under Engineer code
- Press **8** **PROG** keys go into **Test System** function.
- Press **8** key to select **Walk Test** function.
- Press **PROG** key go into walk test.
- Trigger zone 1, the toggle Zone will display in LCD, if it isn't displayed, to check the Zone that you trigger.
- Trigger zone 1 tamper, the toggle Tamper will display in LCD, if it isn't displayed, to check the Tamper that you trigger.
- Trigger Control panel tamper, the toggle Tamper will display in LCD, if it isn't displayed, to check the Tamper that you trigger.
- Press any key to exit "**Walk Test**", then you can view walk Test. Or when '**Exit Walk Test**' = ON, it will automatically exit after 20 minutes.

**TEST SYSTEM
Bell?**

**TEST SYSTEM
Walk Test?**

Walk Test

**Zone Tested
Z1:Zone 1**

**Zone Tamper
Z1: Zone 1**

CP Tamper

**TEST SYSTEM
View Walk Test?**

6.1.8.3 - How to enter View Walk Test

To operate the "**View Walk Test**" as follow:




LCD Remote Keypad :

- Under Engineer code
- Press **8** **PROG** keys go into **Test System** function.
- Press **9** key to select **Walk Test** function.
- Press **PROG** key go into walk test.

**TEST SYSTEM
Bell?**

**TEST SYSTEM
View Walk Test?**

**Zone Tested
Z1:Zone 1**

- Press  key to see the next news
- when you see “**Finished**” press  key to exit.
or Press  key to exit.

Zone Tamper
Z1:Zone 1

Finished?






6.1.8.4 - How to enter View Panel Version

Panel Version

The version of software in this panel.

To operate the view “Panel Version” as follow:

LCD Remote Keypad :

- Under Engineer menu
- Press   keys go into **Test System** function.
- Using  key to select **Panel Version** item.
- Press  key to view the software version.
- Press any key to leave “**TEST SYSTEM**” .
- Press  key to exit engineer program mode.

TEST SYSTEM
Bell?



TEST SYSTEM
Panel Version?

Software Version
2.2

LC ENGINEER MENU
Setup Programs?

6.1.8.5 - How to Exit Engineer Program Menu

LCD Remote Keypad :

- Under Engineer menu.
- Press  key return to top of engineer menu.
- Press  key to exit engineer program mode.
and check system faults (all Tamper, TA zone, PA zone, Fire zone is open)
- When no fault, press any key to exit.
- LCD show DAY mode.

LC ENGINEER MENU
Setup Programs?

Checking for
Faults...

No Fault
Press any key

00:28:08 08-Aug
DAY

6.2 - LED Keypad


How to enter Engineer Program Mode

You should require the manager to authorize Engineer access. It is accessed directly form Day mode via the Engineer code.


To operate the “Enter Engineer operation mode” as follow:

LED Remote Keypad:


- Enter Manager program mode.
- Press **PROG** **0** **1** **2** **3**

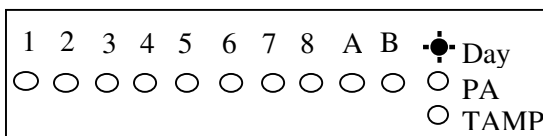


- Press **3** to authorize Engineer access. Then Engineer can access program mode within 3hr hour.

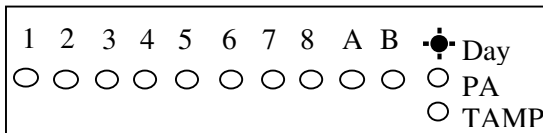

- Press to **RESET** leave the current menu.

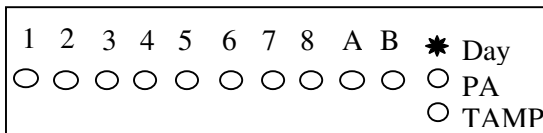

- Input 4-digit Engineer code **9** **9** **9** **9** and go to engineer operation window within 5 seconds.

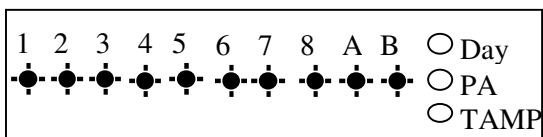


6.2.1 - Setup Programs

The panel has three programs: **1 = Program Full, 2 = Program Part1, 3 = Program Part2.** Each program can set all parameters independent, these are **1 = Zone Function, 2 = Exit Mode, 3 = Exit Time, 4 = Entry Time.** Zones can also be assigned different functions in different programs. Refer to the following diagram for the programming structure.


6.2.1.1 - How to go into Full mode Setting

LED Remote Keypad:

- Under Engineer mode.
- Press **1** to Select **Setup Programs.**

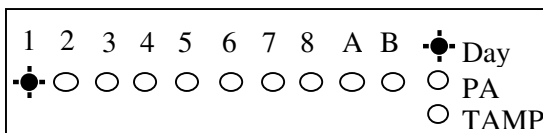


- Press **SET** to accept and go into **Program Full.**

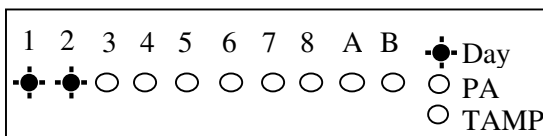


6.2.1.2 - How to go into Part 1 mode Setting

LED Remote Keypad:

- Under Engineer mode.
- Press **1** to Select **Setup Programs**.

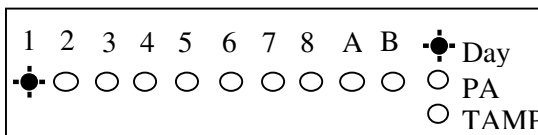


- Press **OMIT** to accept and go into **Program Part 1**.

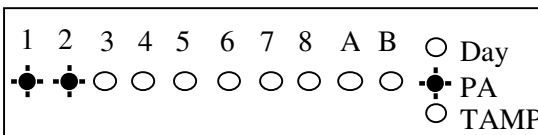


6.2.1.3 - How to go into Part 2 mode Setting

LED Remote Keypad:

- Under Engineer mode.
- Press **1** to Select **Setup Programs**.

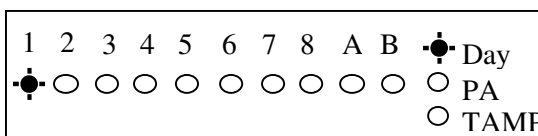

- Press **2** to accept and go into **Program Part 2**.

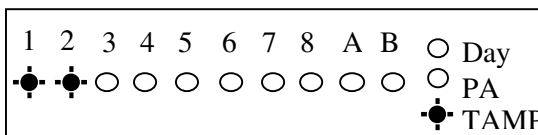

6.2.1.4 - How to set zone function

In **Zone Function**, Security type zones can be assigned different functions. These are **1= Immediate Zone, 2 = Timed Zone, 3 = Inhibited Zone**.

Immediate Zone:

Use this function when the zone is not part of an entry/exit route. When the system is **SET**, activation of an immediate zone will cause a full alarm condition.

Timed Zone:

A time zone would be used to protect an entry/exit route. Opening the door or triggering the sensor in this type of zone when the system is **SET** will start the entry timer.


Inhibited Zone:

A time-inhibited zone operates as an immediate zone unless a timed zone has been operated and a timer started. Such a zone should be utilized to allow passage between the entry/exit door and the control panel when there are detectors present.


LED Remote Keypad:

Set zone Immediate function

Under Engineer Menu/Setup Program, the program Full mode is chosen. LED 1 and LED 2 is flashing.

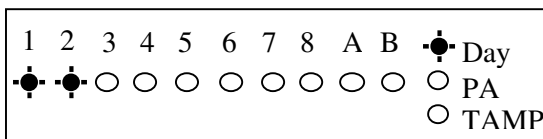


- Press **1** to program Immediate Zone.
LED 1~10 ON indicate selected immediate zones.
Default settings are on.

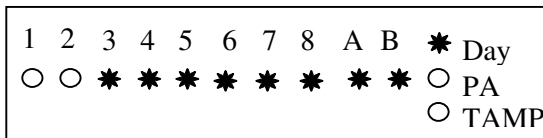

- To edit the other zones press Zone number (1~10). If select, LED is on.
If select Zone 2 to be immediate zone,




- Press **PROG** to accept the change
Or press **RESET** to cancel.

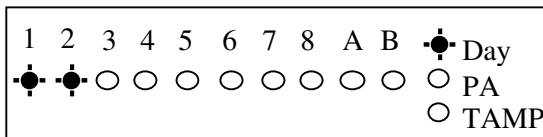


Set zone Timed function


Under Engineer Menu/Setup Program, the program Full mode is chosen. LED 1 and LED 2 is flashing.

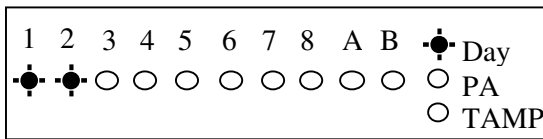


- Press **2** to program Timed Zone.
LED 1~10 ON indicate selected Timed zones.
Default settings are on.

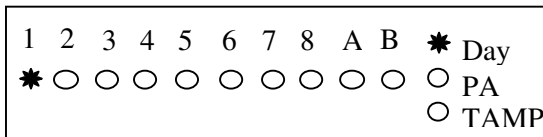

- To edit the other zones press Zone number (1~10). If select, LED is on.
If select Zone 4 to be immediate zone,

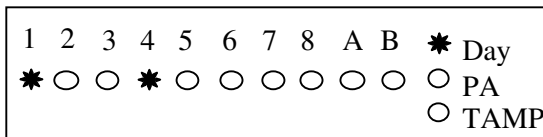


- Press **PROG** to accept the change
Or press **RESET** to cancel.

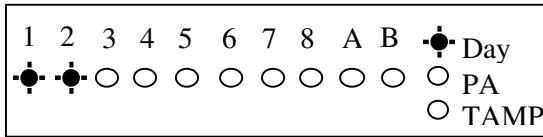


Set zone Inhibited function


Under Engineer Menu/Setup Program, the program Full mode is chosen LED 1 and LED 2 is flashing.

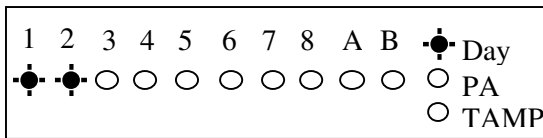


- Press **3** to program Inhibited Zone.
LED 1~10 ON indicate selected Timed zones.
Default settings are on.

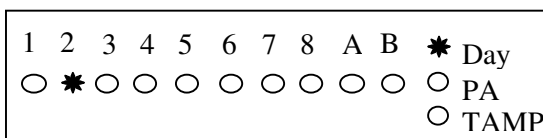

- To edit the other zones press Zone number (1~10). If select, LED is on.
If select Zone 3 to be inhibited zone,
Then press **2** , and press **3**

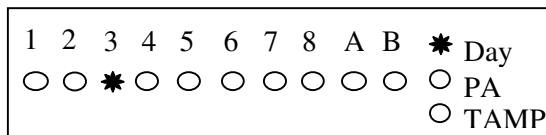

- Press **PROG** to accept the change
Or press **RESET** to cancel.

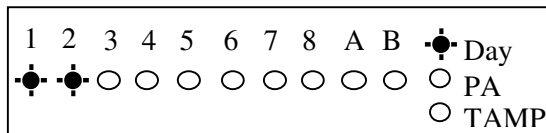

6.2.1.5 - How to set Exit mode function

There are four selections for **Exit Mode** in all mode: **1 = Timed Exit, 2 = Final Door, 3 = Silent Exit, 4 = Terminated, 0 = Disable.**

Timed Exit:

A timed program will set once the exit timer has expired and all zones are clear.

Final Door:

A final door program will set 5 seconds after the final door has been opened and closed.

Silent Exit:

This operates exactly the same as **Timed Exit** but completely silent without internal sounder signal.

Terminated:


A terminated program will set once the PTS terminal has been trigger.

Disable:


A disabled program is not available for use and cannot be selected and setting time.

LED Remote Keypad:


Under Engineer Menu/Setup Program, the program Full mode is chosen. LED 1 and LED 2 is flashing.

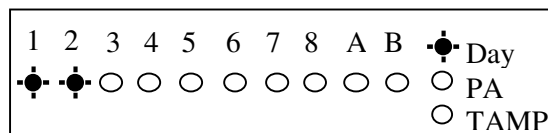


- Press **4** to program Exit Mode.
LED 1 ON indicates system selected: Timed

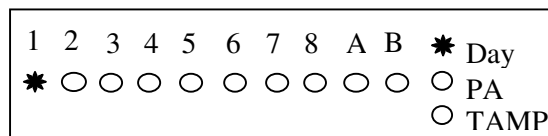

- Change exit mode to Silent.
Press **3** to select silent

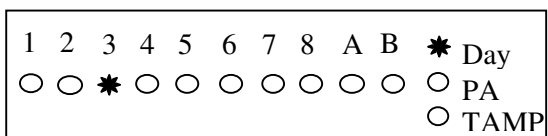

- Press **PROG** to accept the change
Or press **RESET** to cancel.

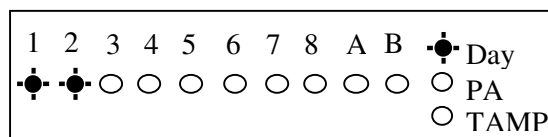

6.2.1.6 - How to set Exit time function


This is the time allowed to leave the premises via the exit route before the system sets. The programmable range is 00-99 seconds.

If the **Exit Time** is interrupted with the last 10 seconds, then the **Exit Time** will restart at 10 seconds after the interruption has cleared.





The default is 45 seconds.

LED Remote Keypad:

Under Engineer Menu/Setup Program, the program Full mode is chosen. LED 1 and LED 2 is flashing.

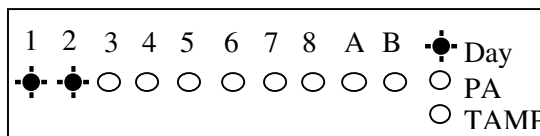

- Press **5** to select Exit time item.
Z1, Z2 LED light indicate you input 2 digit Number.
- Set the exit time of full arm mode 20 seconds.
Then Press **2** digit number, Z1 LED off .
- Then Press **0** digit number, Z2 LED off .
PA and TAMP LED flashing indicate you accept or cancel.
- Press **PRCG** to accept the change.
Or press **RESET** to cancel.

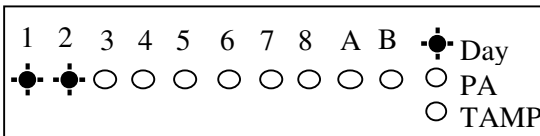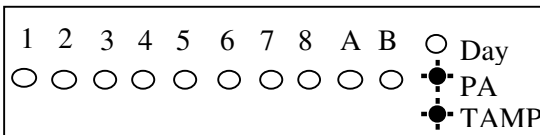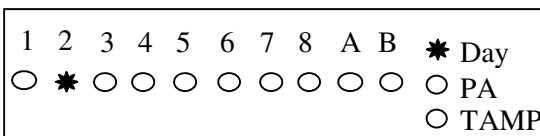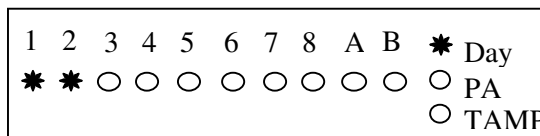




6.2.1.7 - How to set Entry time function

This is the time allowed to enter the premises via the entry route and unset the system. The programmable range is 00-99 seconds. The default is 45 seconds.


LED Remote Keypad:

Under Engineer Menu/Setup Program, the program Full mode is chosen. LED 1 and LED 2 is flashing.

- Press **6** to select Entry time item.
Z1, Z2 LED light indicate you input 2 digit Number.
- Set the entry time of full arm mode 20 seconds.
Then Press **2** digit number, Z1 LED off .
- Then Press **0** digit number, Z2 LED off .
PA and TAMP LED flashing indicate you accept or cancel.

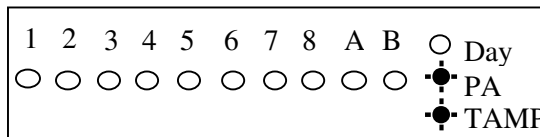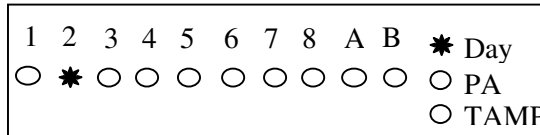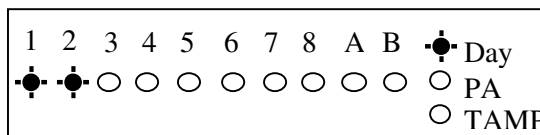

- Press **PROG** to accept the change. Or press **RESET** to cancel. Press **RESET** **RESET** to return to Engineer mode.

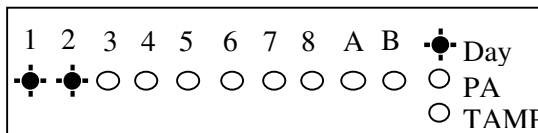

6.2.2 - Setup Zones Type

The 'Setup Zones Type' contains: 1 = Zone name, 2 = Zone type.

6.2.2.1 - How to set Zone Name

LED Remote Keypad:

The LED Remote Keypad cannot program zone names.

6.2.2.2 - How to set Zone Type

There are six types for Zone: **1 = Security, 2 = PA, 3 = Door Bell, 4 = Fire, 5 = Tamper/24H, 0 = Not Used.**

Security:

The system comes supplied with service links fitted to the zone terminals to simulate a closed circuit. As each zone is connected these links should be removed. All zone are fully programmable.

PA:

A Zone may be programmed for audible PA should be wire in series.

Door Bell:

This feature can be programmed into any Zone. A doorbell will not operate whilst the entry/exit timers have started, when the system is in full alarm condition or whilst in programming mode.

Fire:

If you choose to utilize a zone as a fire zone then no other detectors may be wired into this zone. Therefore a zone cannot be both fire and intruder.

Tamper/24H:

Provides 24 hour monitoring.

Not used


A zone may be programmed for Not used, then is ignored by the panel.

To operate the Setup Zone type as follow.


e.g. Change zone 5 type to Fire zone.

LED Remote Keypad:


- Under Engineer mode.
- Press **2** to select set up Zone Type.

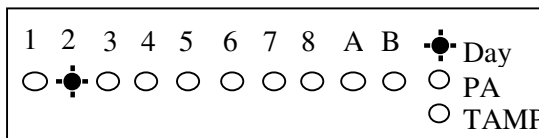


- Press a number button to select Zone to be Configured ie.
- Press **5** to select zone 5, Zone 5 is Security.

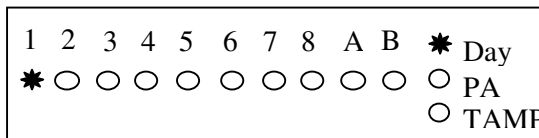

- Press **4** to select Fire

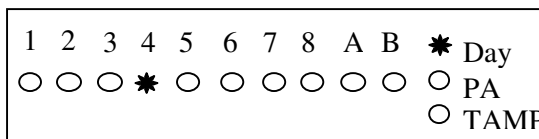

- Press **PROG** to accept the change. or press **RESET** to cancel. Press **RESET** to return to engineer mode.

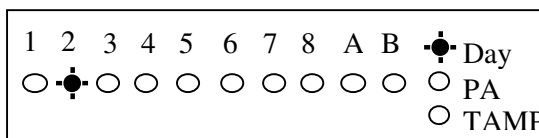

6.2.3 - Setup Zones Attrs

There are three attrib for Zone: 1 = Omit Allowed, 2 = Double Knock, 3 = Chime. You can set it ON or OFF.

Omit Allowed:

When a Zone is programmed as Omit Allowed, the panel allows the Zone to be Omitted for one set period by the user when setting the system.

Note: The zone which must to be security then it can be set omit allowed at first.

Double Knock:

Double knock programming is used when zones are likely to create false activations. Double knock requires two activations within 10 minutes of the same Zone or a Zone left open for 10 seconds.

Chime:

If a Security Zone is programmed as Chime, you can hear special tone when it is triggered in DAY mode.


Note: The zone must to be security to be set Chime.

To operate the Setup Zone attribute as follow.


e.g. Set zone 2 have Omit Allowed, Double Knock and Chime attributes (set ON).

LED Remote Keypad:


- Under Engineer mode
- Press **3** to select Zone Attributes menu.

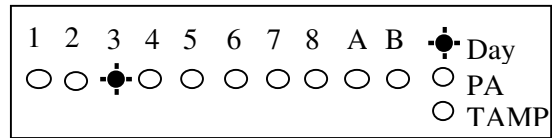


- Press zone No. to select zone (0~9).
- Press **2** to select zone 2, and indication zone 2 current attributes status.

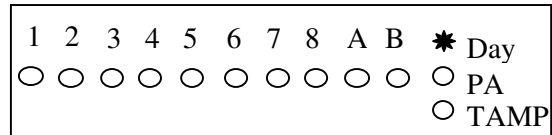


- Press **1** to select Omit Allowed. Or

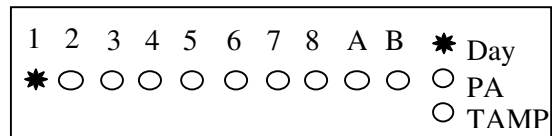


- Press **2** to select Double Knock, Or.

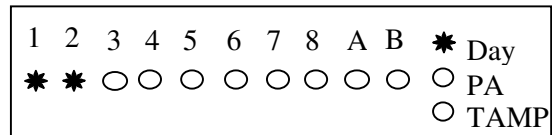


- Press **3** to select Chime. Or

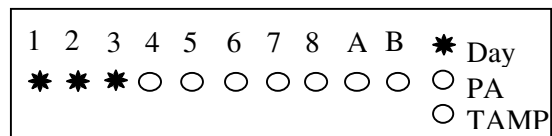


- If press **0** will clear selected zone 2 attributes.Or

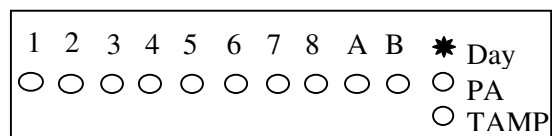

- If press **9** will set zone 2 Omit Allowed, Double knock, Chime attributes to ON.

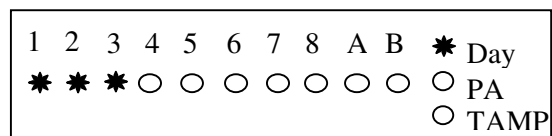

- Press **PROG** to accept the change. Or press **RESET** to cancel. Press **RESET** to return select Zone Attributes menu.

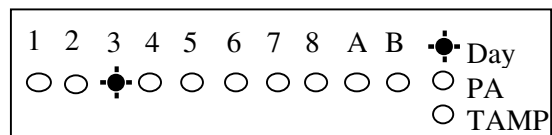

6.2.4 - Setup Codes

6.2.4.1 - How to set up User Code

There are 2 user codes can be set by LED Keypad in the system. All are 4-digit and can be set to any number from 0000 to 9999. The access codes ensure that only authorized users can operate the system.

1 = user 1, 2 = user 2, 3 = Holiday, 4 = Engineer

User 1 – User2 codes:

The user 1 –user 2 codes have the same operation for testing and Setting and Unsetting, changing their own code.

Holiday code:

The purpose of this code is to allow access to the property whilst the manager is absent. The Holiday access code is programmed by the Manager and is only valid until the manager use's the system. At this point the Holiday code becomes invalid and is no longer accepted by the control panel.

Engineer code:

Accesses the Engineer program mode to allow the system to be programmed. If configured the Engineer's code can be used to reset the system after an alarm.

NOTE: Entering an invalid user code over 4 times, the keypad will be locked out 90 seconds. After 9 incorrect code entries an alarm/ tamper condition will be generated.

6.2.4.2 - How to change User Name

LED Remote Keypad:

The LED Remote Keypad cannot program user names.


6.2.4.3 - How to change User Code

This option allows each of the users to be given a code.


LED Remote Keypad:

Under Engineer Menu.

- Press **4** to select Setup User codes.

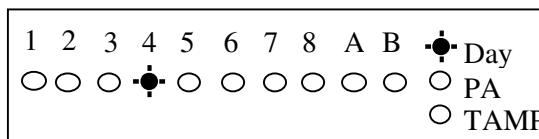


- Press **1** to change User 1.

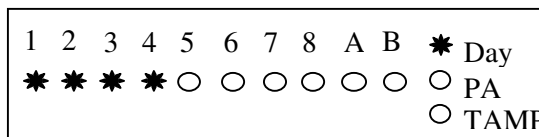


- Enter the new user 1 code (4 digits)

? **?** **?** **?** New code

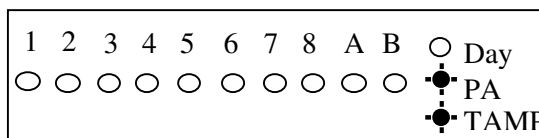

- Press **PROG** key to save. If the 4-digit is the same as old, the error tone will be generated.
- Press **RESET** key will cancel and return.

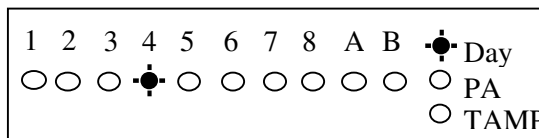


6.2.4.4 - How to delete User Code


LED Remote Keypad:

Under Engineer Menu.


- Press **4** to select Setup User codes.

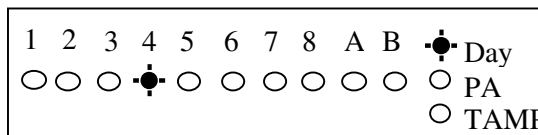

- Press **1** to change User 1.

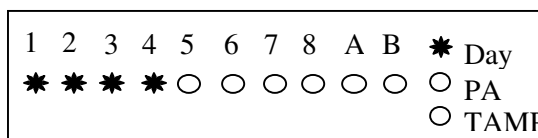

- Press **OMT** key to delete user 1 code.

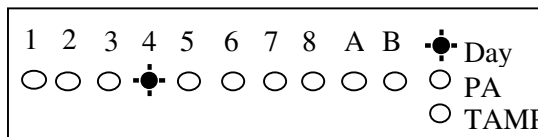

- Press **PROG** to accept the change.

- Press **RESET** to return to engineer mode.

6.2.5 - Setup system

The catalog of Setup system contains eight parts. They are list as follow:

1 = Flags1, 2 = Flags2, 3 = Bell Time, 4 = Rearm count, 5 = Bell delay time, 6 = Set Time, 7 = Set Date, 8 = Service Date.

6.2.5.1 - How to Setup System Flags

The System Flags are divided into Flags1, 2.

Flag1 – Options

There are eight options under Flag1 which are described below:

2=RKP PA, 3=Engineer Reset, 4=PA user Reset, 5=Fire user Reset, 6=Bell in Fire, 7=Disable Bell Tamper, 8=lock Engineer Code, 9=Exit Walk Test

RKP PA

When this flag is set to ON, the keypad's PA function is enabled.

Engineer Reset

When this flag is set to ON, an engineer code must be entered to reset the system after Tamper, PA or Fire alarm. When the flag is set to OFF the system can be reset by the user.

PA user Reset

When this flag is set to ON, it permits the user to reset the system after a PA alarm, by pressing user code. The user can reset the system even if the **Engineer Reset** flag is set to ON.

Fire user Reset

When this flag is set to ON, it permits user to reset the system after a Fire alarm by pressing user code. The user can reset the system even if the **Engineer Reset** flag is set to ON.

Bell in Fire

When this flag is set to ON, the external siren Bell box will sound On/two second off during the fire alarm.

Disable Bell Tamper

When this flag is set to ON, when the Bell Tamper is trigger in FULL, Part1, Part2 mode the alarm system will not process it.

Lock Engineer Code


When this flag is set to ON, the system can't reset the engineer code to default when you use "Reset NVM" command.

Exit Walk Test


When this flag is set to ON, it will automatically return to next option after 20 minutes.

LED Remote Keypad:


- Under Engineer mode
- Press **5** to select Setup system.

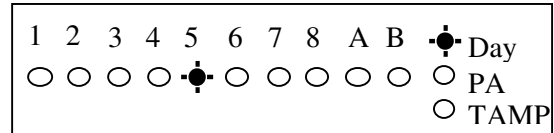


- Press **1** to select system flag item.

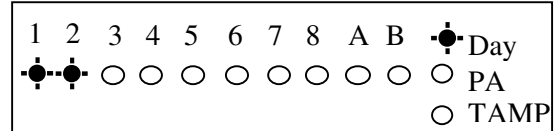


- Press **1** to select system flag 1 option.
Default settings are on.

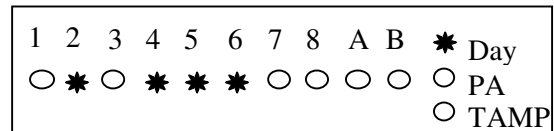


- For example, add Engineer Reset and Walk Test Auto-exit enable.
Press **3** and **9** to select.

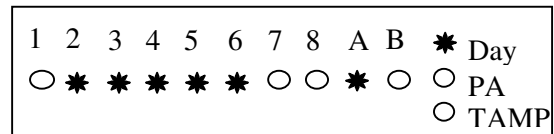

- And cancel PA User Reset,
Press **4** to disable, the corresponding LED OFF.

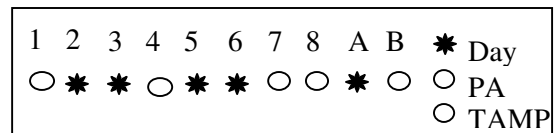

- Press **PROG** to accept the change. Or press **RESET** to cancel. Press **RESET** **RESET** to return to engineer mode.

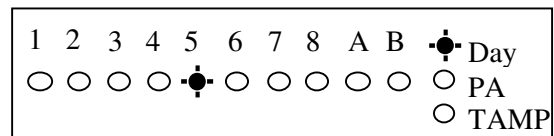

Flag2 – Options

There are eight options under Flag2 which are described below:

1=Key switch, 2=Doorbell, 3=Strobe on Set, 4=Single key Set, 5=EN Compliant, 6=EOLR Zone
 7=Daylight Saving, 8=Service Timer

PTS as Keyswitch

When this flag is set to ON, this enables the system to be SET and UNSET with the use of a key switch in PTS terminal. If the panel needs to be reset then a manager/user code must be entered.

PTS as Doorbell

When this flag is set to ON, Keyswitch = OFF, the PTS terminal is programmed to a doorbell, if the Keyswitch = ON, the PTS terminal is used as Keyswitch.

Strobe on Set

When this flag is set to ON, the external strobe will stay on for five seconds once the panel has set.

Single key Set


When this flag is set to ON, it allows the panel to be set Full mode by pressing the [Set] button, set Part 1 mode by pressing [▲] key, set Part 2 mode by pressing [▼] key. A code entry is not required. However, a 4-digit code is required to Unset the panel.

EN Compliant

When this flag is set to ON, the alarm system has Battery Monitoring function.

EOLR Zone

When this flag is set to ON, the alarm system goes to EOLR mode. Each detector must have a 2k2 resistor connected across its alarm contacts. In addition, a 2k2 resistor must be connected across the end of the Zone wiring, as shown in the following diagram. Note the PIR detectors usually have a “spare” terminal for this purpose.

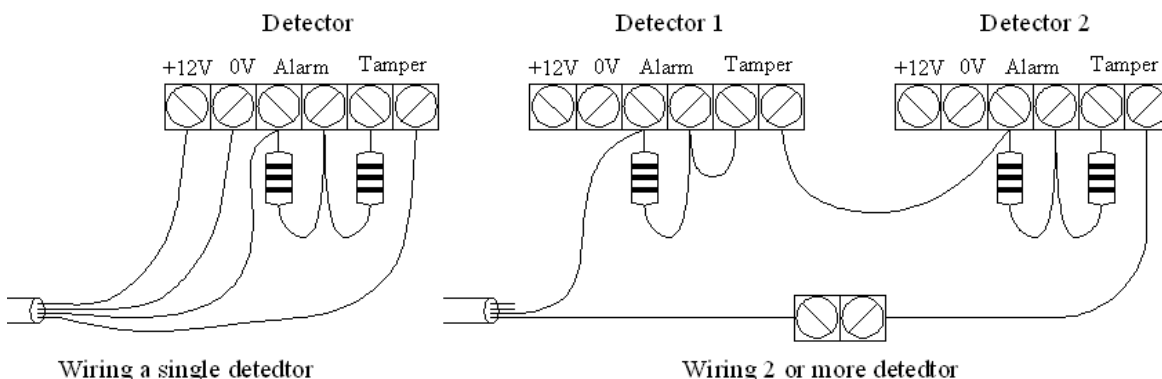

Daylight Saving


When this flag is set to ON, the system will turn clock back 1 hour 2 am on the first Sunday in Apr and ahead 1 hour 2 am on the first Sunday in Oct.

Service Timer

When this flag is set to ON, the user can use the alarm system during Service Time.

LED Remote Keypad:

- Under Engineer mode.
- Press (5) to select Setup system.
- Press (1) to select system flag item.
- Press (2) to select system flag 2 option. Default settings are on.
- For example, add EN Compliant flag. Press (5) to select.
- Press (PROG) to accept the change, Or press (RESET) to cancel. Press (RESET) (RESET) to return to engineer mode.

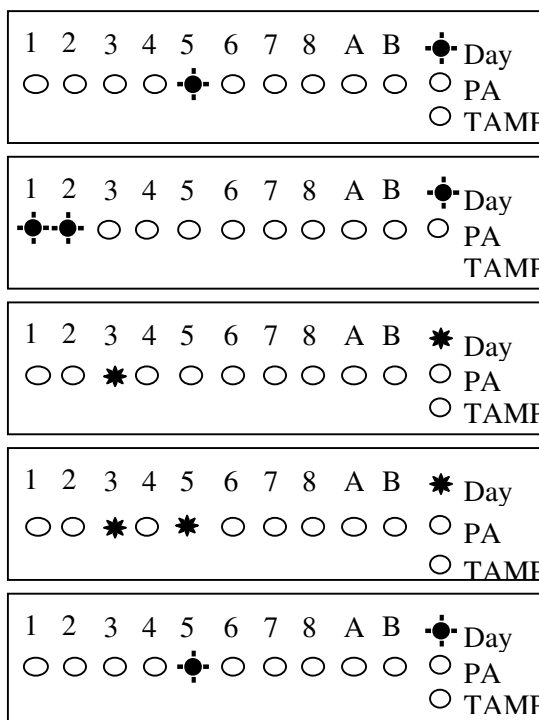

6.2.5.2 - How to Setup Bell Time

This is the duration that the external bell output is active. The range is 01-20 minutes. The default is 14 minutes.

e.g. Change the **Bell Time** from 14 to 15 minutes.


LED Remote Keypad:

- Under Engineer mode
- Press **5** to select Setup system.

- Press **2** to select bell time item.

- Press **1** and **5** to change 15 minutes.

- Press **PROG** to accept the change.
Or press **RESET** to cancel.

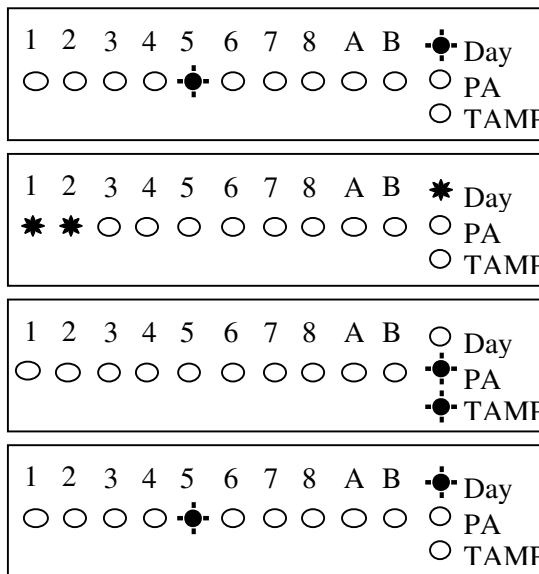

6.2.5.3 - How to Setup Rearm count

After an alarm the panel will automatically rearm itself when the external siren (Bell) timer has expired. Any Zones and tamper, panic which still remain open at that time will be automatically omitted.

The default is 3 rearms. 0 = no rearms, 1-8= number of rearms, 9= always rearm

e.g. Change the **Rearm Count** from 3 to Always rearm.


LED Remote Keypad:

- Under Engineer mode
- Press **5** to select system item.

- Press **3** to select rearm count item.
LED 1 ON indicate you enter only 1 digit.

- Press **9** to change to always rearm.

- Press **PROG** to accept the change.
Or press **RESET** to cancel.

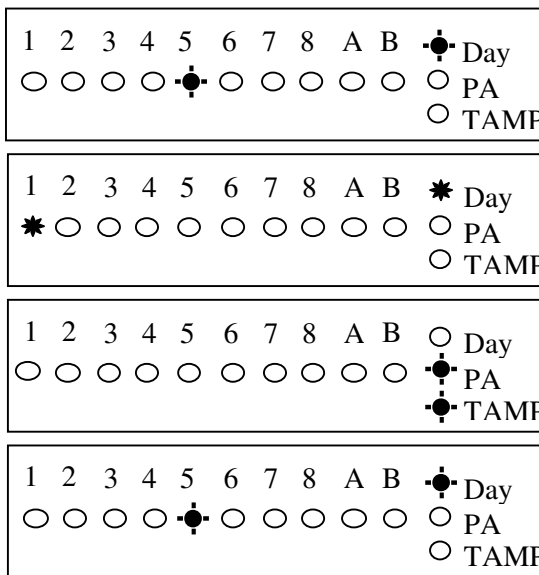


6.2.5.4 - How to Setup Bell delay time

This delays the activation of the Bell for the required time. The range is 00-99 minutes. The default is 00 minutes.


e.g. Change the Bell Delay time from 0 to 1 minute.

LED Remote Keypad:


- Under Engineer mode
- Press **5** to select system item.

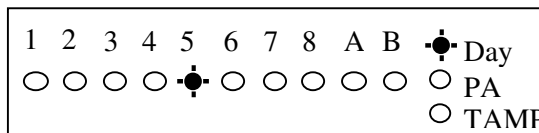


- Press **4** to select bell delay time item. LED 1 and 2 ON indicates you enter only 2 digits.

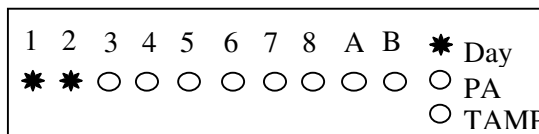

- Press **0 1** to change bell delay time.

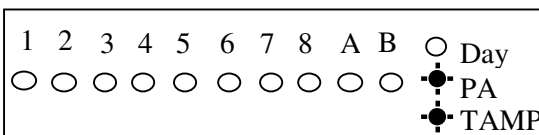

- Press **PROG** to accept the change Or press **RESET** to cancel. Press **RESET** to return to engineer

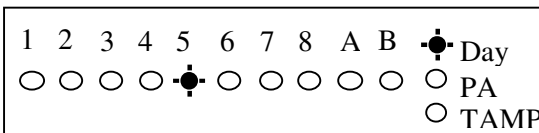

6.2.5.5 - How to Setup Set Time

LED Remote Keypad:

The LED Remote Keypad cannot set time.

6.2.5.6 - How to Setup Set Date

LED Remote Keypad:

The LED Remote Keypad cannot set date.

6.2.5.7 - How to Setup Service Date

LED Remote Keypad:

The LED Remote Keypad cannot set service date.

6.2.6 - Misc menu


6.2.6.1- How to Restore to factory value using menu


You will change the value of all parameters to factory default value when you set it.

CAUTION: All configurations of the panel are reset to reset to factory default conditions.

To default to factory settings:

Led Remote Keypad:

- Under Engineer mode to top of menu.
LED 1~10 is flashing.
- Press  twice within 2 second. Rapid bleeps
All system setting returns to factory default.

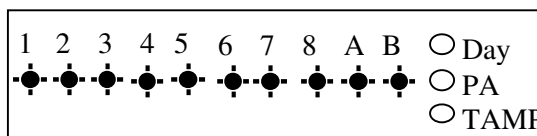

NOTE 1 : If Lock Engineer flag is ON, Engineer Code can not reset to factory default

NOTE 2 : After reset, the zone A and B will be named as zone 9 and 10 respectively. The zone type of both zone 9 and 10 will be "Immediate".

6.2.7 - View Event Log

The event log gives a display of all the events that have taken place. The events are arranged by date and time. Up to 16 events can be stored in the memory. When the log reaches 16 events and another event takes place, the first event drops out. The system is known as FILO (First In Last Out).

To view the event log:


Led Remote Keypad:


- Press:
- ① Jump to oldest event
 - ② Move one event older
 - ③ Move one event newer
 - ④ Jump to newest event
 - ⑨ Clear all alarm event


After selecting Alarm Log the zone, PA and Tamper LED's will show the latest event
A flashing LED indicates the zone that was first activated.


Any other LED lit was activated after the first event but before system unset.

- Under Engineer code

- Press  to select view alarm event.
LED 1 flashing indicate Zone 1 is triggered first.
TAMPER is triggered after Zone 1

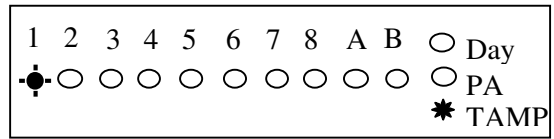


- Press  to leave view alarm log menu.

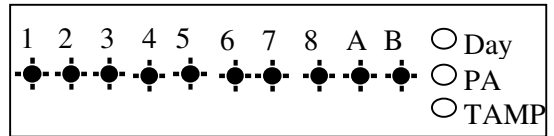


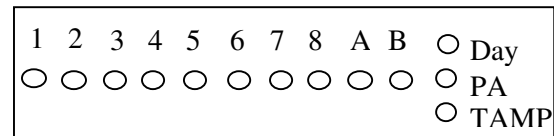
How to clear all alarm events?


- Under Engineer code


- Press  to select view alarm event.

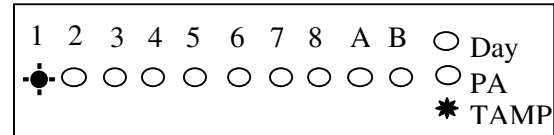


- Press  to clear all alarm events.
System all LEDs would be dark and emit a confirm sound to indicate clear all alarm event.



 Acknowledge

- Press  to leave view alarm log menu.

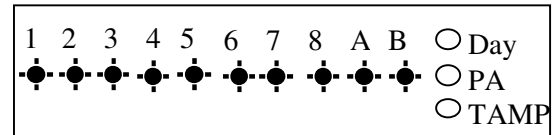

6.2.8 - Test System


This function has four parts in Test System: **Test output, Walk Test, View Walk Test, Panel Version.**

6.2.8.1 - How to Test Outputs


The test outputs are: **0 = BELL, 1 = Strobe, 2 = Speaker,**

LED Remote Keypad


- Under Engineer code
- Press **8** key to Select Test System.

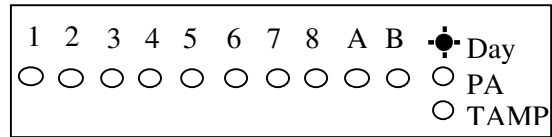


- Press **0** key to select Bell test.

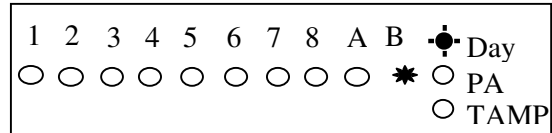


- Press **1** key to select Strobe test.

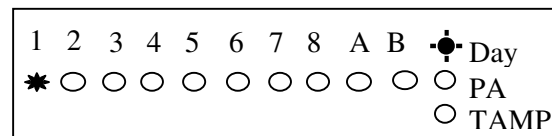

- Press **2** key to select Speaker test.

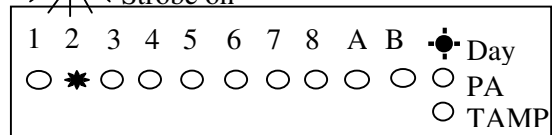

- Press **RESET** key to exit current level.

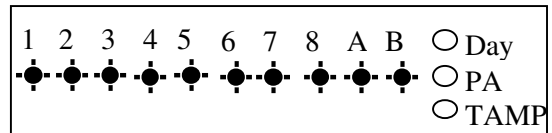


6.2.8.2 - How to enter Walk Test

The walk test function allows check each Zone trigger, Zone tamper, Detect Tamper, Control panel tamper, BellBox tamper, Remote Keypad tamper. if order to verify that they are functioning correctly. A tone is generated as each zone or tamper is activated (opened).

e.g. Trigger Zone and Zone tamper


LED Remote Keypad :

- Under Engineer code
- Press **8** key to Select Test System.

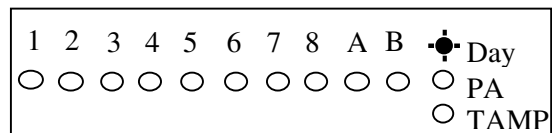


- Press **8** key to select Walk test.


Trigger zone 1, when a zone is successfully tested, the LED is on, Zones are added to list as each one is activated.

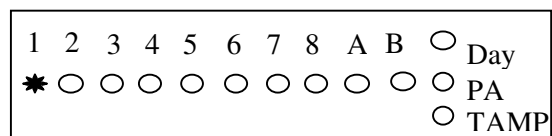


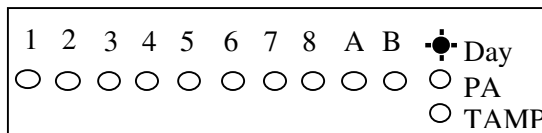
- Trigger zone 1 tamper and its appropriate led will light.

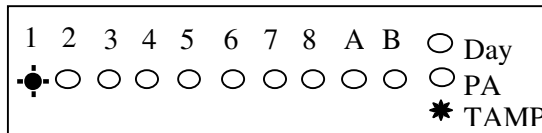

- The Tamper LED comes on when tested.

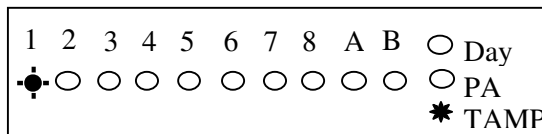

- Press  key to exit current level.



6.2.8.3 - How to enter View Walk Test

LED Remote Keypad :

The LED Remote Keypad cannot operate the menu item.


6.2.8.4 - How to enter View Panel Version


LED Remote Keypad :


The LED Remote Keypad cannot operate the menu item.


6.2.8.5 - How to Exit Engineer Program Menu

LED Remote Keypad :


- Under Engineer menu.
- Press  key return to top of engineer menu.

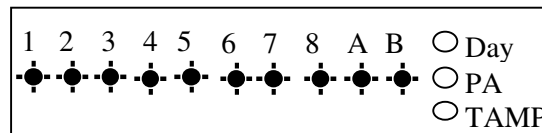


- Press  key to exit engineer program mode. and check system faults (all Tamper, TA zone, PA zone, Fire zone is open)

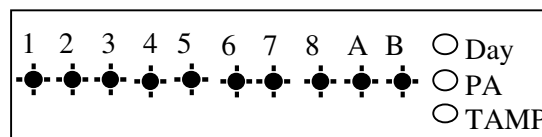

- When no fault, press any key to exit.

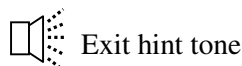

- Return to DAY mode.

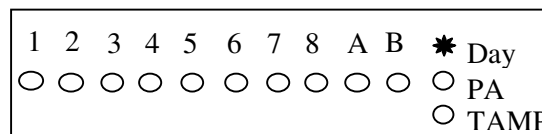

Section 7 - Using System

After you have finished system settings, you can then use the system. This section gives an operation of how to set and unset the system as well as how to reset after an alarm.

7.1 - LCD Keypad

7.1.2 - Setting the System

The panel has three programs: Program Full, Program Part1, Part2. Each can be programmed independently in the Engineer operations mode. So you can set the system to the corresponding mode: **Full Mode, Part1 Mode and Part2 mode**. You can set them as follows.

LCD Remote Keypad :

- System is in Day mode and supply power 1 minute later.

00:01:00 08-Aug
DAY

- Enter 4-digit manager or user code and wait later.





e.g. press 0 1 2 3

Enter your code

- Hint manager using 3 seconds.

===Welcome===
Manager

- Hint user select arm mode

Press  key to select Full arm mode,
Or press  key to select Part 1 arm mode,
Or press  key to select Part 2 arm mode.
Or press  key to exit.

To Set Select
[Full] [P1] [P2]


- Exit and check system faults.


System fault contains: Tamper Zone, PA Zone, Fire Zone, Zone N tamper (when EOLR function enable), CP tamper, Detect Tamper, RKP Tamper, Bell Box Tamper

- If it has faults in system, you can see the fault from LCD and the fault tone will be generated, you should to solve the fault to entry the mode


e.g. Detect 1 abnormal.

Exit Faults...
Z1:Zone 1

 Exit error beep

- When no fault, it will display “Exit–No Faults” and the exit tone will be generated, it is going to the mode that you selected until the exit time is end, if press  key will quick set the system.

Exit–No Faults

 Count down beep

- Arm mode is set.

00:01:45 08-Aug

Note: “**To Set Select ******” will be displayed the mode that you set not to disable in *Engineer Mode/ Setup Programs/ Exit mode*.


7.1.2 - How to OMIT a zone(s)



If you cannot set the alarm system because a detector is faulty and in constant alarm you may need to omit its zone from the alarm system. A zone which has been omitted cannot cause an alarm. Omitted zones will be restored after the system is unset.



Before a zone can be omitted it has to be enabled by the engineer as “**Setup zone attrs/Omit Allowed**” zone.

LCD Remote Keypad :


- System work in setting mode, select the set mode is required .
(for more information see “**How to Setting the System**”)

- Press  key to go into omit zone window, and display first omit allowed zone.

- Select a omit allowed zone using  or  key.

- Press  key to accept and continue setting or press  key to cancel omit function.

- System work in setting mode

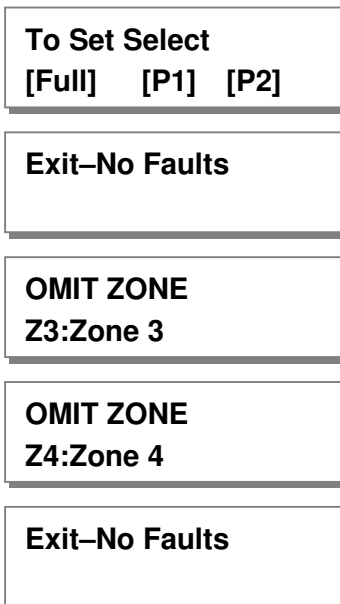

7.1.3 - Unsetting the System

To unsetting the system in SET as follows.


LCD Remote Keypad :

- System is in the SET mode

- Input 4-digit manager or user code.
e.g. press    

- Hint manager unset 3 seconds.

- System will be reset and work in DAY mode.

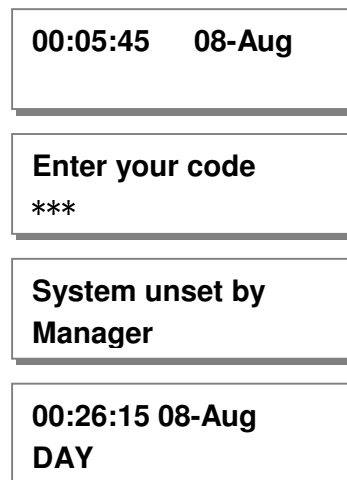

CAUTION: Entering an invalid user code will operate the code tamper. After 9 incorrect keys pushes a full alarm condition will be generated.

7.1.4 - How to UNSET from Alarm and RESET the system

You can unset the system in SET and reset it after an alarm, Tamper or PA.

The system will be programmed to be reset by the user or engineer. This is dependent on System flags set up. See **Engineer mode / Setup System/ Flags 1**.

e.g. Control Panel tamper trigger alarm

LCD Remote Keypad :

- System work in SET mode

- Enter manager / user code


e.g. press 0 1 2 3 (manager code)

- It will stop system in alarm and the LCD keypad will display the message of newest alarm event.

Hint (the display will scroll the following two screens)

- Enter manager/ user/ engineer code reset. ? ? ? ?

- Day mode

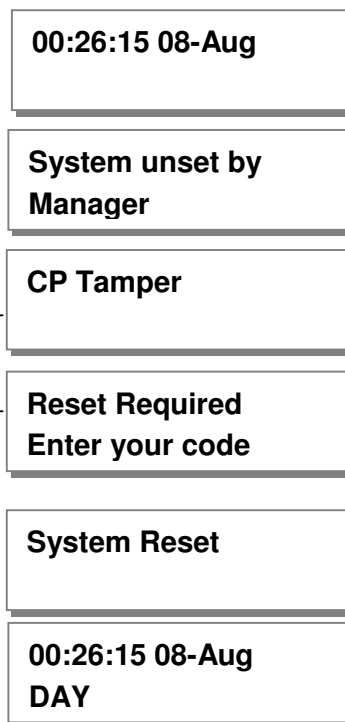

7.1.5 - How to use Panic Alarm on keypad

Should you need to attract attention, the full alarm signal can be activated at emergency by pressing 0 and 5 together

Press 0 & 5 simultaneously, the system and external sounder will sound immediately.


7.2 – LED Keypad





7.2.1 - Setting the System


The panel has three programs: Program Full, Program Part1, Part2. Each can be programmed independently in the Engineer operations mode. So you can set the system to the corresponding mode: **Full Mode, Part1 Mode and Part2 mode**. You can set them as follows.

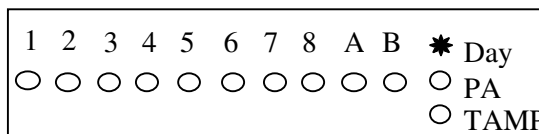



LED Remote Keypad :


- System is in Day mode and supply power 1 minute later.

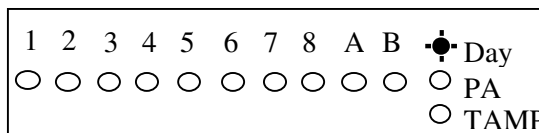


- Enter User code/Manager code    
Day LED will flash 5 second, then you can select arm mode.



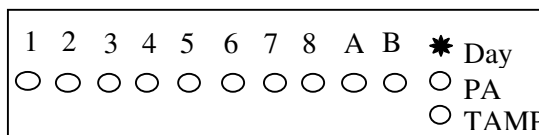

- Press  key to select Full arm mode,
Or press  key to select Part 1 arm mode,
Or press  key to select Part 2 arm mode.
Or press  key to exit.

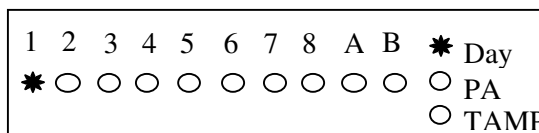


- If it has faults in system, you can see the fault from LED and the fault tone will be generated, you should to solve the fault to entry the mode e.g. Detector 1 abnormal.




 Exit error beep

- Press  key quick set the system.(Optional)

 Count down beep

- After you selected arm mode, Day LED became steady.

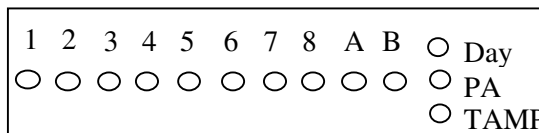


7.2.2 - How to OMIT a zone(s)

If you cannot set the alarm system because a detector is faulty and in constant alarm you may need to omit its zone from the alarm system. A zone which has been omitted cannot cause an alarm. Omitted zones will be restored after the system is unset.


Before a zone can be omitted it has to be enabled by the engineer as “Setup zone attrs/Omit Allowed” zone.

LED Remote Keypad :

- System work in setting mode, add the set mode is chosen.(for more information see “How to Setting the System”)

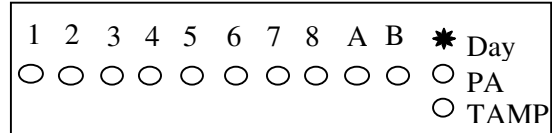


- Press **OMIT** key to go into omit zone window, and all omit allowed zone is lit.

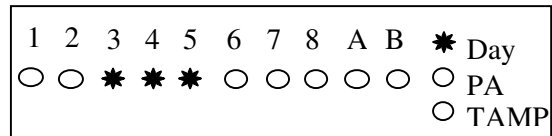


e.g. To omit zone 4

- Press **4** to omit zone 4, the corresponding LED OFF
- Press same key to toggle ON/OFF.

Note: 1-9 key= zone1 –zone 9, 0 key = zone 10.

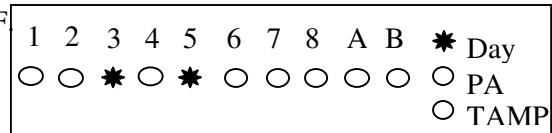

- Press **PROG** key to accept and continue setting or press **RESET** key to cancel omit function.

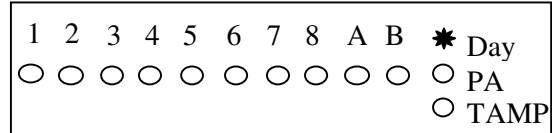


- System work in setting mode

7.2.3 - Unsetting the System


To unsetting the system in SET as follows.

LED Remote Keypad :

- System is in Set mode.

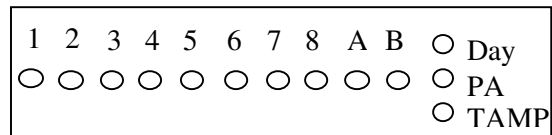

- Enter User code/Manager code **???** System returns to Day mode.

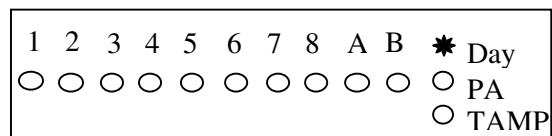

CAUTION: Entering an invalid user code will operate the code tamper. After 9 incorrect keys pushes a full alarm condition will be generated.

7.2.4 - How to UNSET from Alarm and RESET the system


You can unset the system in SET and reset it after an alarm, Tamper or PA.

The system will be programmed to be reset by the user or engineer. This is dependent on System flags set up. See **Engineer mode / Setup System/ Flags 1.**

e.g. Control Panel tamper trigger alarm


LED Remote Keypad :

- System is in Set mode.

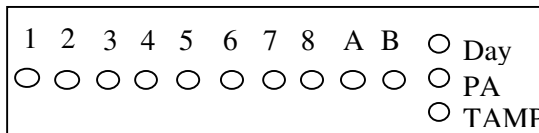


- Enter User code/Manager code (?) (?) (?) (?)

It will stop system in alarm and the LED keypad will hint of alarm event. First event is flashing, other lit.

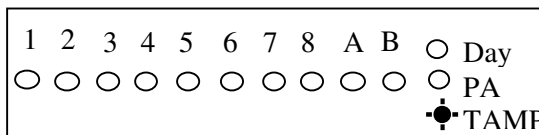

- Enter User code/Manager code (?) (?) (?) (?)

System returns to Day mode.

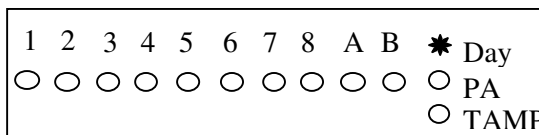

7.2.5 - How to use Panic Alarm on keypad

Should you need to attract attention, the full alarm signal can be activated at emergency by pressing 0 and 5 together

Press (0) & (5) simultaneously, the system and external sounder will sound immediately.

Section 8 - Maintenance

Once every three months,

- Test all detectors.
- Check loudspeaker of control unit.
- Test sirens and strobes of the bellbox.

Additionally, once every year,

- Check external bell box
- Test detector feature

Additionally, once every three years,

- Replace the rechargeable battery in the Control Unit.

Section 9 - Troubleshooting Guide

Control Unit (CU)

Symptoms	Possible cause & cures
Power indicator off. Key pad not responding.	No power supply to unit. Check connectors to mains and backup battery.
Power indicator does not light up but the RKP is working.	Main supply is out. It is operating from backup battery. Check power connections/adaptor.
TAMPER	Tamper triggered, check tampers (panel, keypad, detectors, bellbox). Or Low backup battery condition; check battery fuse. Replace panel battery as soon as possible.
No response to detectors	Check if Links are across used zones.. Remove them.
No response to keystroke	Power reset (both mains and backup battery)

Remote Keypad (RKP)


Symptoms	Possible cause & cures
Keypad not working.	Check the connection, check keypad address.
Keypads not working one at a time.	Check address jumper in the back PCB of keypad.

Remark: If you have any problem with the alarm system. To default to factory settings, please follow sections 5 explained in this manual.

LED System Faults/Troubleshooting


Control Panel





When system flag, EN Compliant flag is ON, There are 2 possible faults:


In Day mode the flashing Tamper LED indicates a fault. Entry of a valid code will show up to 2 LEDs flashing, prompting the user to accept the fault by pressing the  key.


Mains Fail

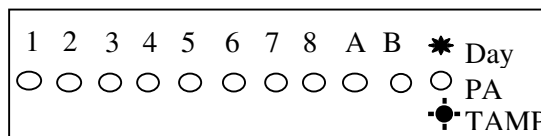
- System is in Day mode.
Day LED ON, TAMP LED flashing.



- Enter User code / Manager code    
Show TAMP LED, Z1 LED flashing.

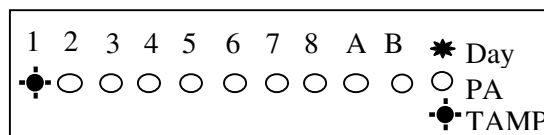


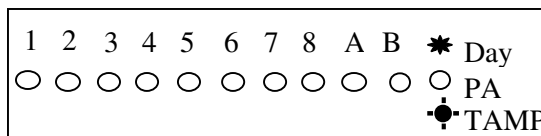



- Press  key to accept the fault.





Low Battery Volts

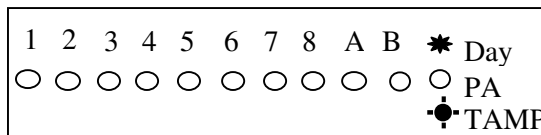
- System is in Day mode.
Day LED ON, TAMP LED flashing.



- Enter User code/Manager code    
Show TAMP LED, Z3 LED flashing.

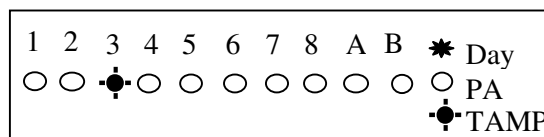

- Press  key to accept the fault.

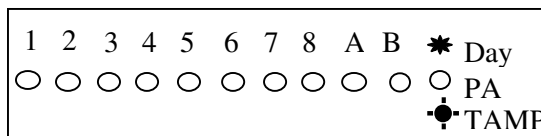

Key Board Lockout

When you enter 4 groups invalid code, keyboard will lockout for 90 seconds.

And then you enter the second 4 groups invalid code, the keyboard will go on lockout for 90 seconds.

When you go on enter 1 invalid code again, system will cause an alarm condition.

Section 10 - Specifications

10 ZONE OFF-BOARD LCD ALARM PANEL	
Type of Alarm Panel	Microprocessor based control unit
Housing	ABS
Entry Delay	default 45 seconds, programmable
Exit Delay	default 45 seconds, programmable
Alarm Zone	10 Zones - Programmable function
Remote Keypad	Up to 4 LCD / LED Keypads
Tamper	-Ve loop
External Bell box output	DC12V, max current : 400mA, adjustable timer(1-20 mins)
Strobe output	DC12V latching
External Speaker	DC12V 16ohm, max current : 230mA
Set+ output	0V in Day mode 13V in Set mode
Siren Duration	Default 14 minutes
Current consumption control panel	Standby : 50mA Alarm : 100mA
Current consumption for LCD keypad	Standby : 60mA Alarm : 100mA
Current consumption for LED keypad	Standby : 40mA Alarm : 70mA
Rechargeable battery voltage output	13.8V DC stabilized(+/- 5%) up to 350mA
Rechargeable battery	DC12V, up to 2.1Ah
Charge Voltage	13.8V dc
Board fuse on control panel	1.6A 20mm quick blow
Total Current output	1A when supported by a fully charged battery
Mains supply voltage	230V AC (+/- 10%) 50Hz max load 0.5A
Ambient operating temperature	0°C ~ 40°C
Dimensions (mm)	253 x 195 x 61

Appendix 1 – Event Log Messages

Keypad text	Description
Power up	Supply power on
Engineer Start	Enter engineer program mode
Engineer End	Leaving engineer program mode
Code Change	User N code be changed
Battery Low	Battery low voltage
AC Mains Failed	Mains power supply failure
AC Mains OK	Mains power supply restored
Battery OK	Battery voltage normal
Service Due	Service Time expired
Program SET	User has set the system with program Full. Part 1, or Part 2
System SET	System into Set mode
System Unset	User has unset the system
Key SET	Keyswitch set the system
Key Unset	Keyswitch unset the system
Unset from Alarm	User has unset the system from alarm
Intruder Alarm	Intruder zone activated (opened)
Entry Start	Entry time started
Entry Deviate	Entry time Deviate (Immediate zone activated)
PANIC Alarm	Panic zone activated (opened)
Fire Alarm	Fire zone activated (opened)
RKP Tamper	RKP tamper opened
Detect Tamper	Detect tamper opened
CP Tamper	Control panel tamper opened
BellBox Tamper	Bellbox tamper opened
Code Tamper	Invalid user code was entered
Tamper Alarm Zn: Zone n	24h/Tamper zone activated (opened)
Zone Tamper Zn: Zone n	EOLR Zone tamper opened

Appendix 2 – Zone - Location Table

Zone Number	Location
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

Disposal and Recycling

Batteries and waste electrical products should not be disposed of with household waste. Please recycle where these facilities exist.

Technical Support

For technical help with this product, please email info@leeds.com.hk.